Renoplast

SIMPLE K20R system


installation guide for balconies, patios and terraces with pebblestone flooring.



edition 16.10.2026

Renoplast

Placement of SIMPLE K20R components

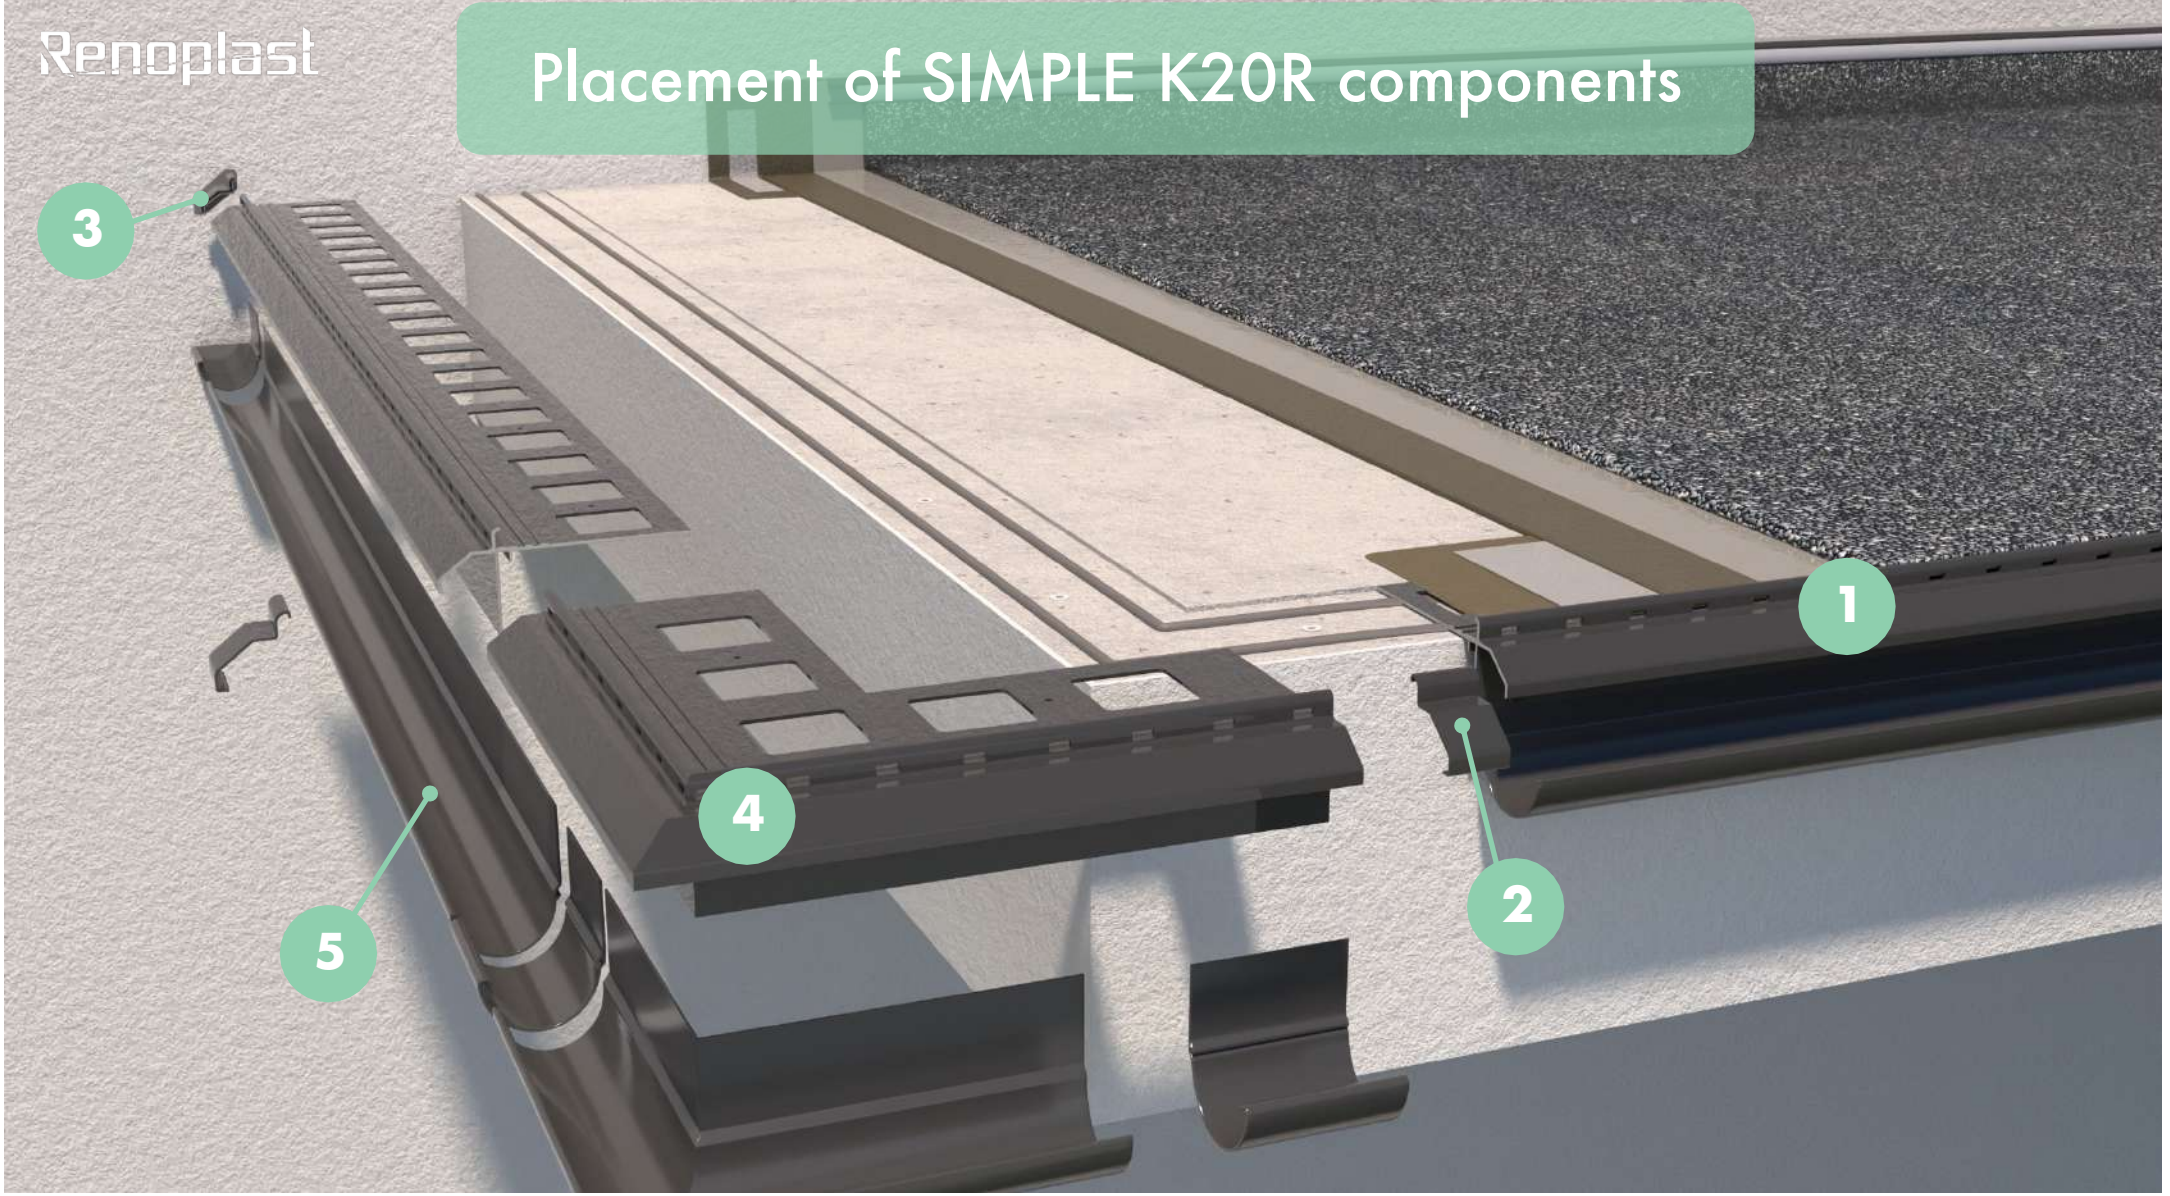

K20R drip edge
200 cm length



1

LK20/LK20R
drip edge clip



2

OPK20/OPK20R P+L
wall protection end caps



3

K20R 90 external
corner



4

R50 round gutter




5



Balcony/ terrace floor screed

The floor screed should be structurally sound and even, sloping 1.5 – 2% towards the balcony/ terrace front edge. Along the balcony/ terrace edge a 3 mm deep by 80 mm wide recess should be made in the screed to allow setting the drip edge flush with the screed top surface.

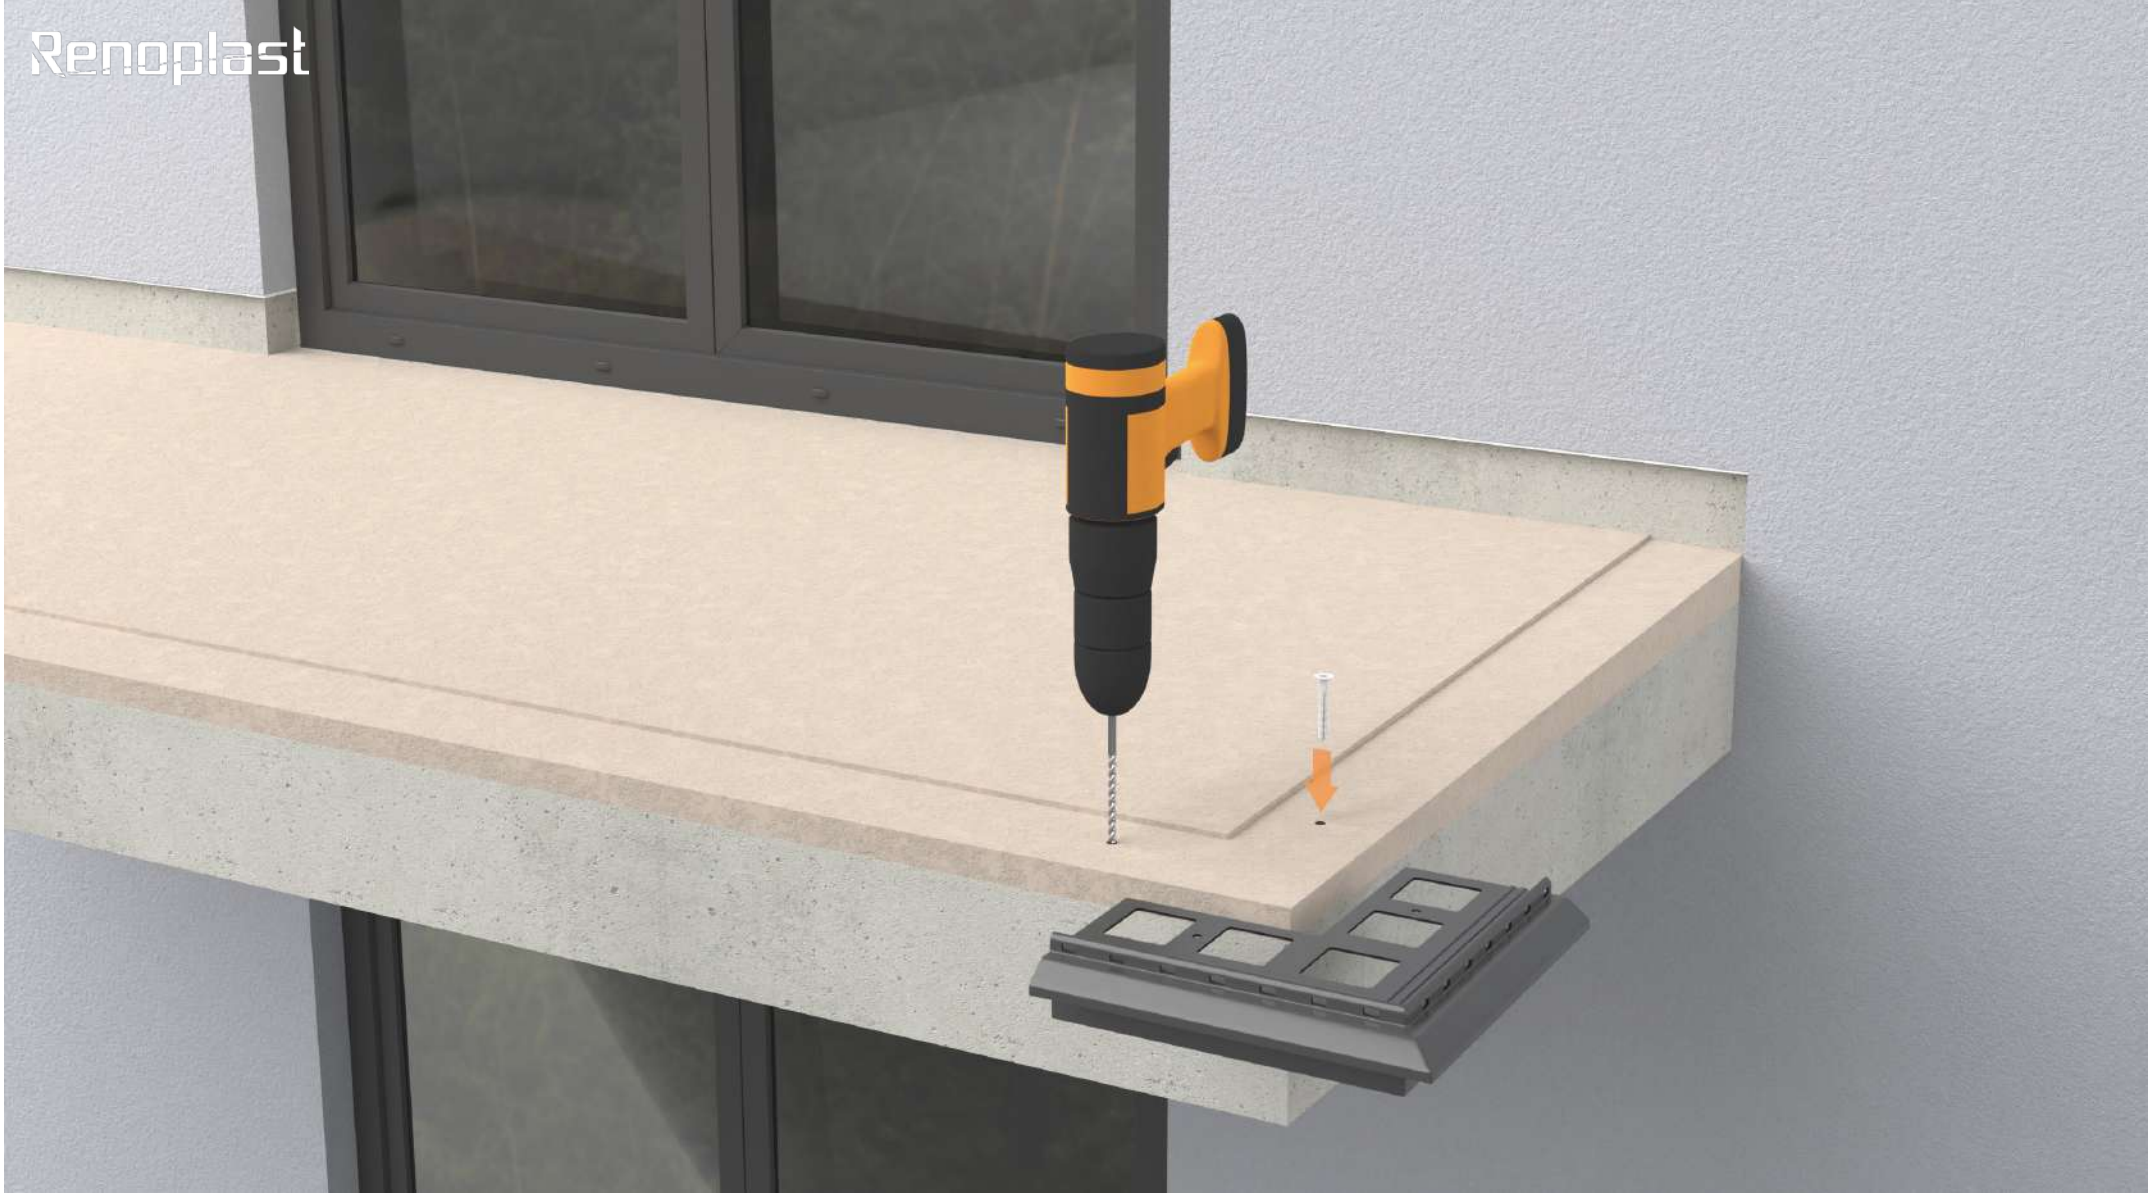


Pre-fitting K20R 90 external corners

Start the installation by pre-fitting the external corners using the supplied plastic wall plugs.




Preparation of K20R drip edges

Measure straight lengths to cut the **K20R** drip edges to the required length. Allow for ca. 2 mm wide expansion joints between adjacent drip edging sections. At walls leave sufficient space for fitting **OPK20/OPK20R** wall protection end caps. For cutting use a metal handsaw or a circular saw equipped with an aluminium cutting disc. Other tools may damage the paint coat, which is considered unacceptable.

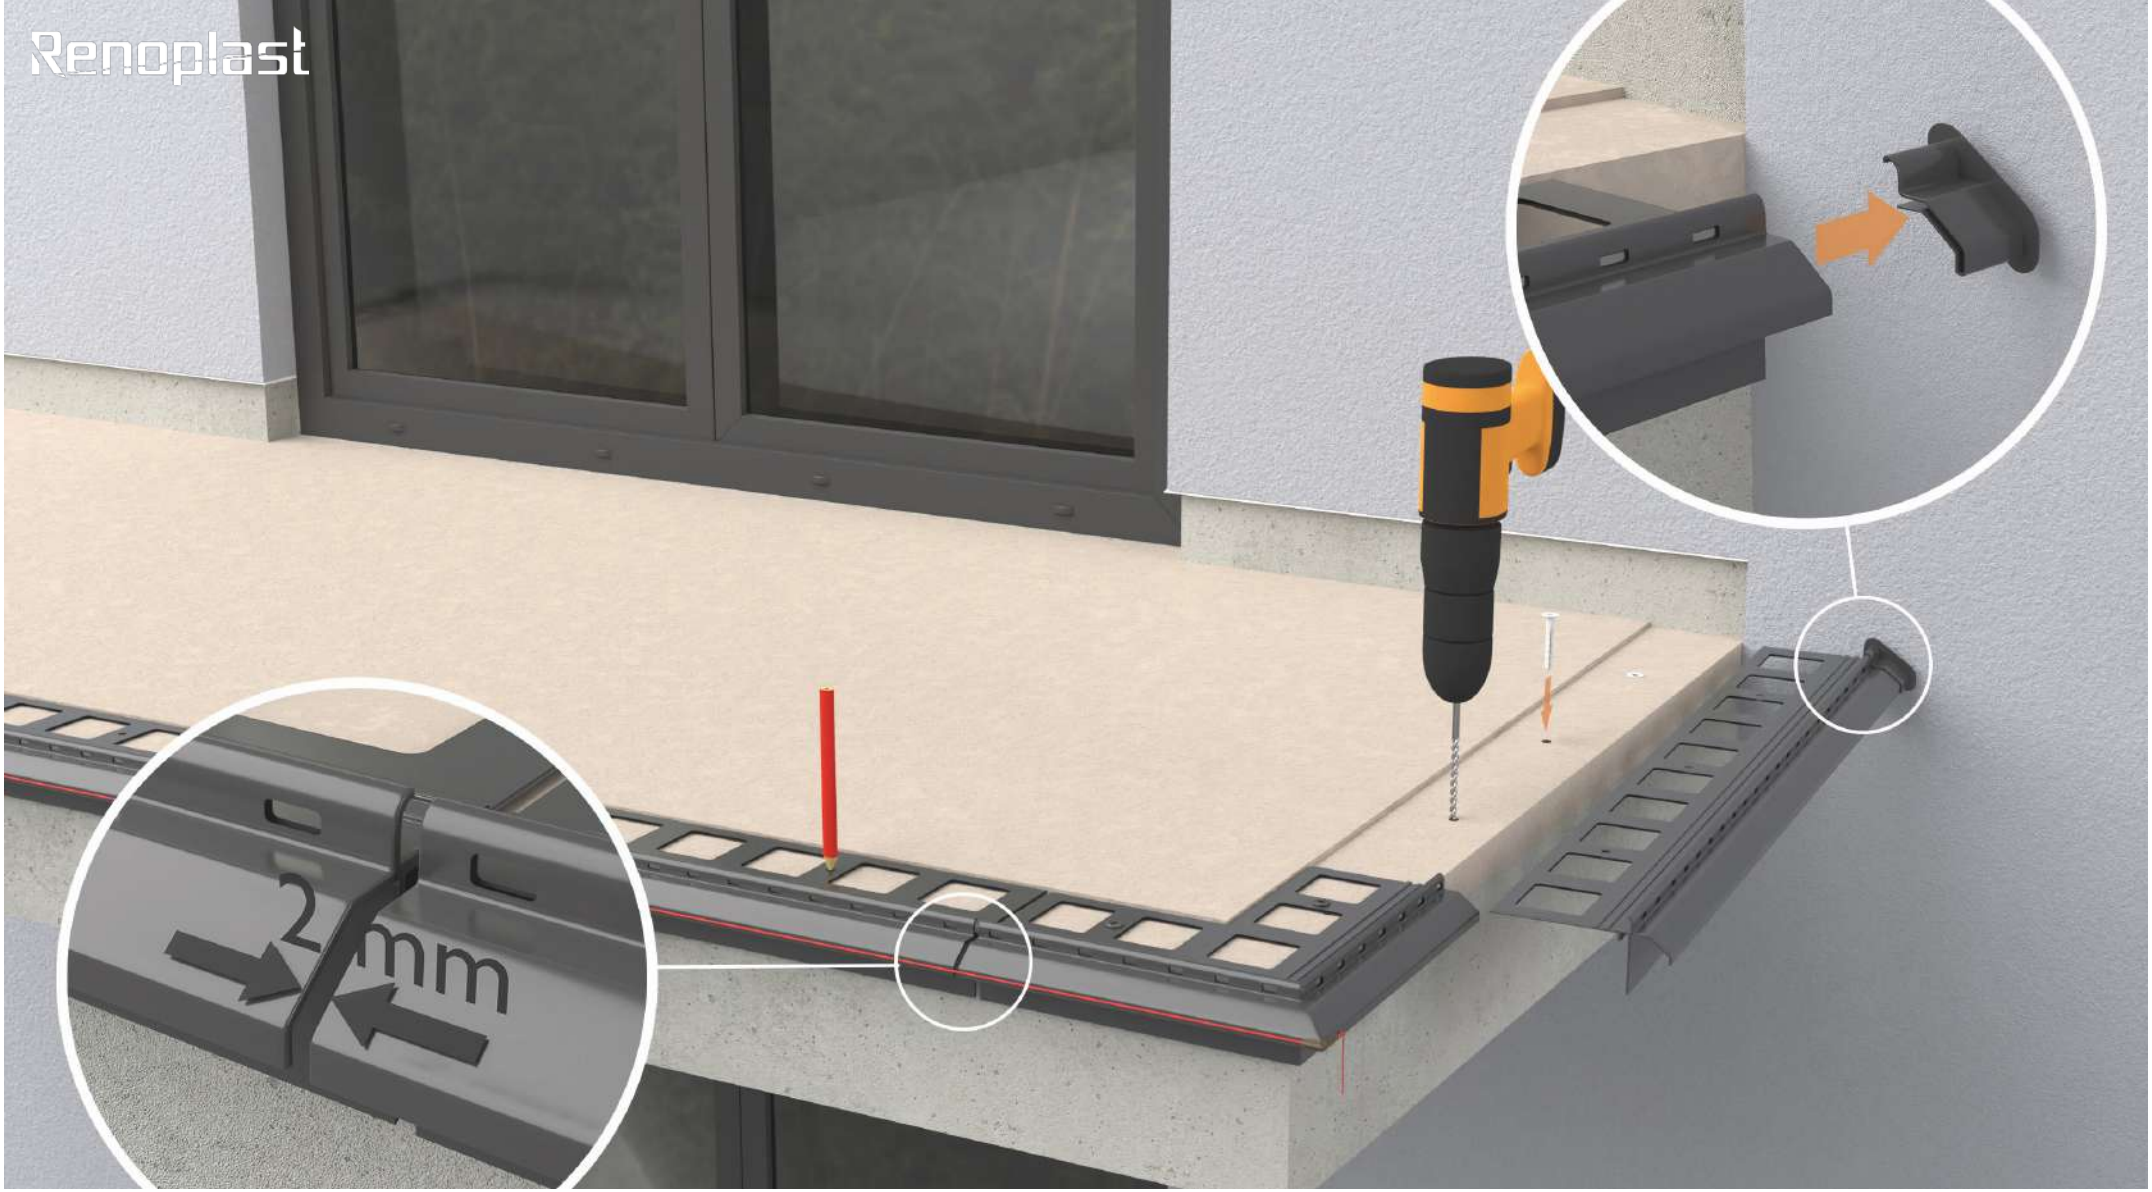


Making fixing holes in the screed

Lay **K20R drip edges** between the pre-fitted **K20R 90 external corners** and mark fixing holes positions. Remove the drip edging to drill the fixing holes in the screed.

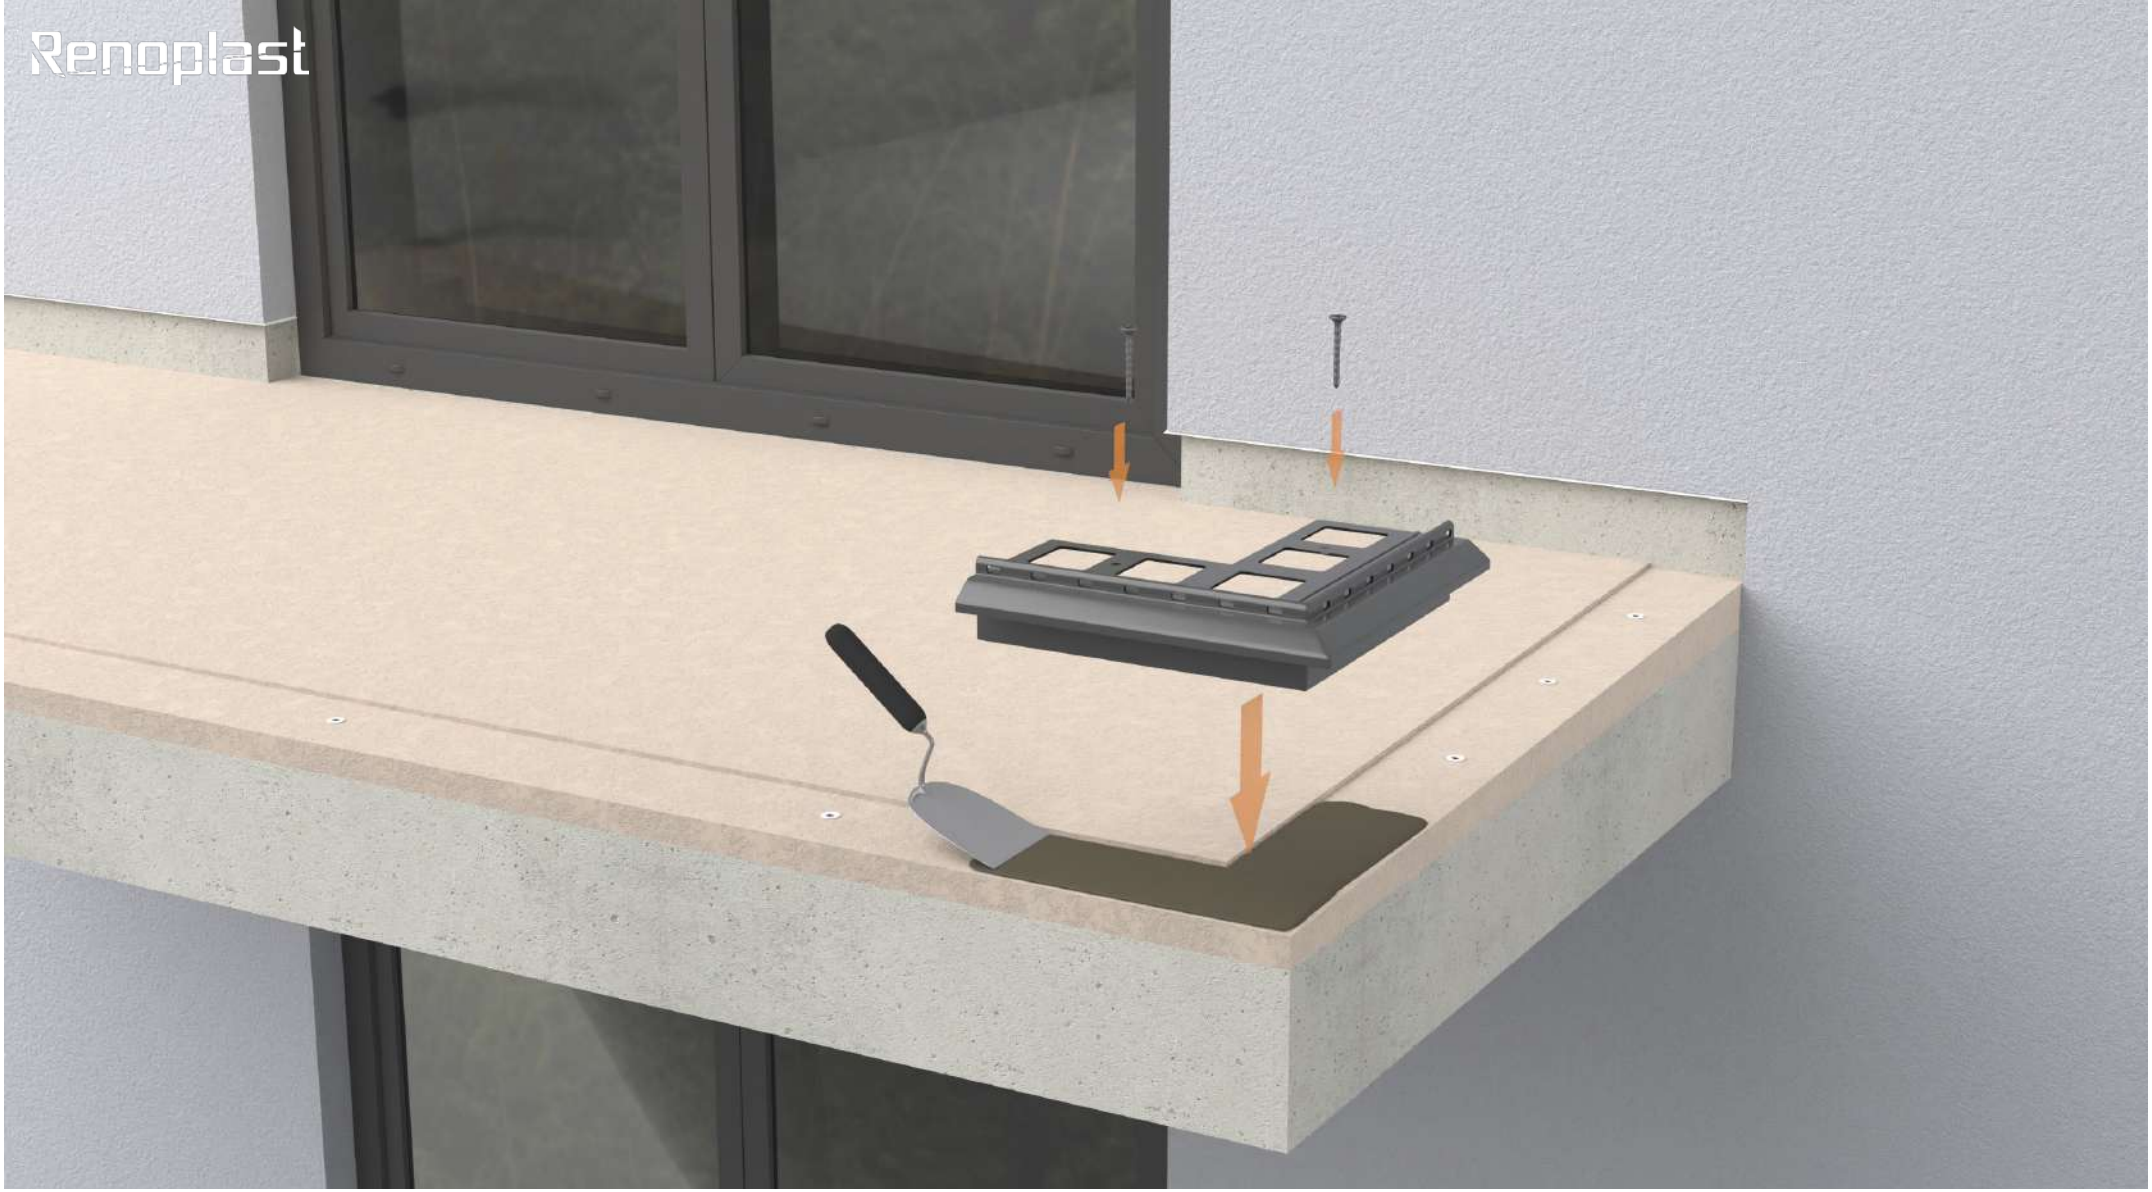


Final fixing of K20R 90 external corners

External corners should be bedded on the applied sealing slurry and mechanically fixed using the pre-installed plastic plugs. Once the slurry has cured tighten the plug screws as required.

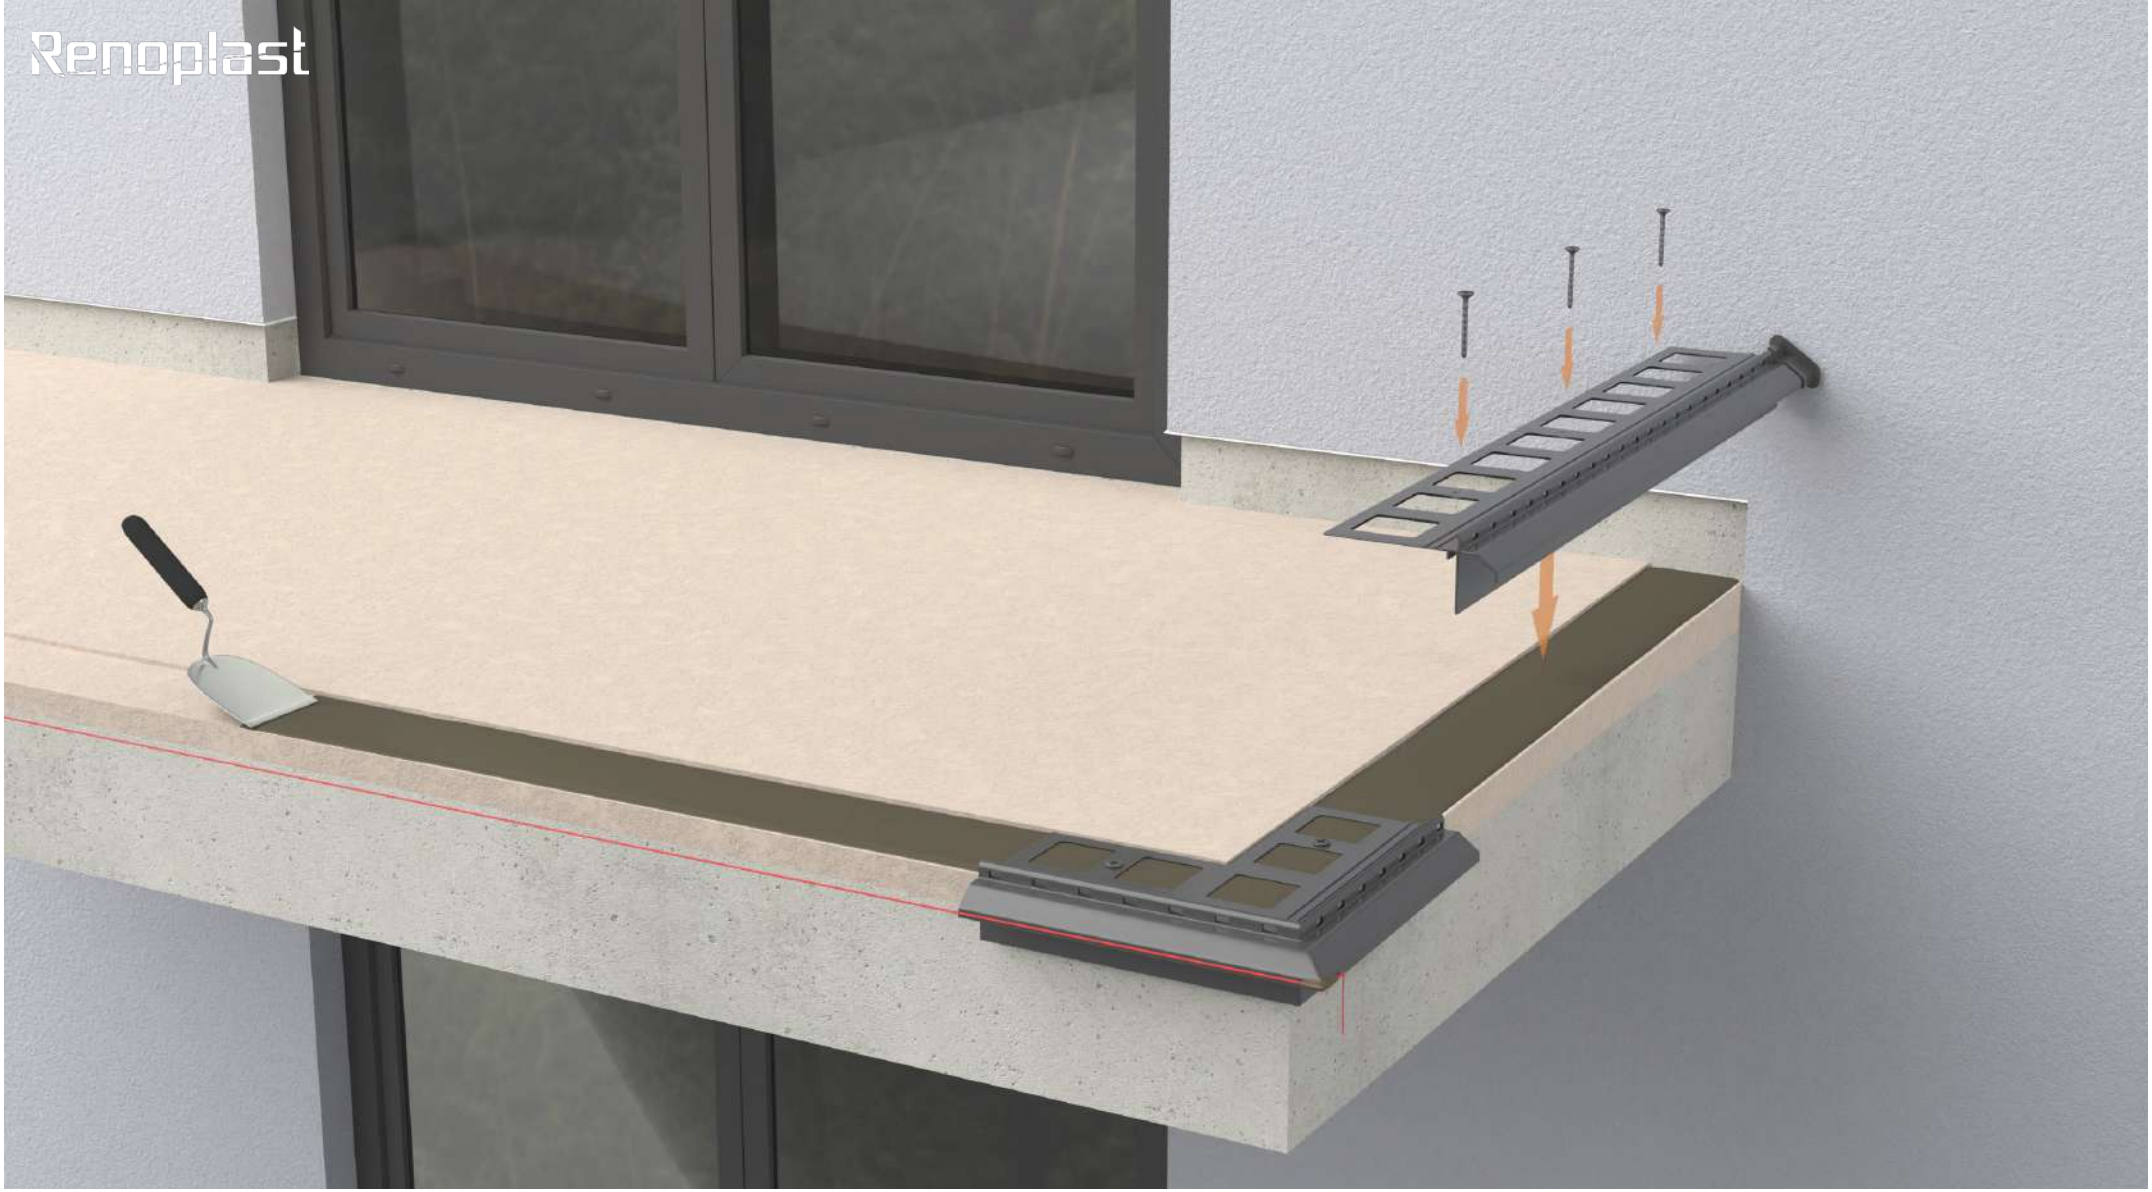

Fixing of K20R drip edges

Straight sections are fitted in the same way as corner pieces. Use a string line stretched between adjacent corners and a spirit level to ensure straight and level alignment.

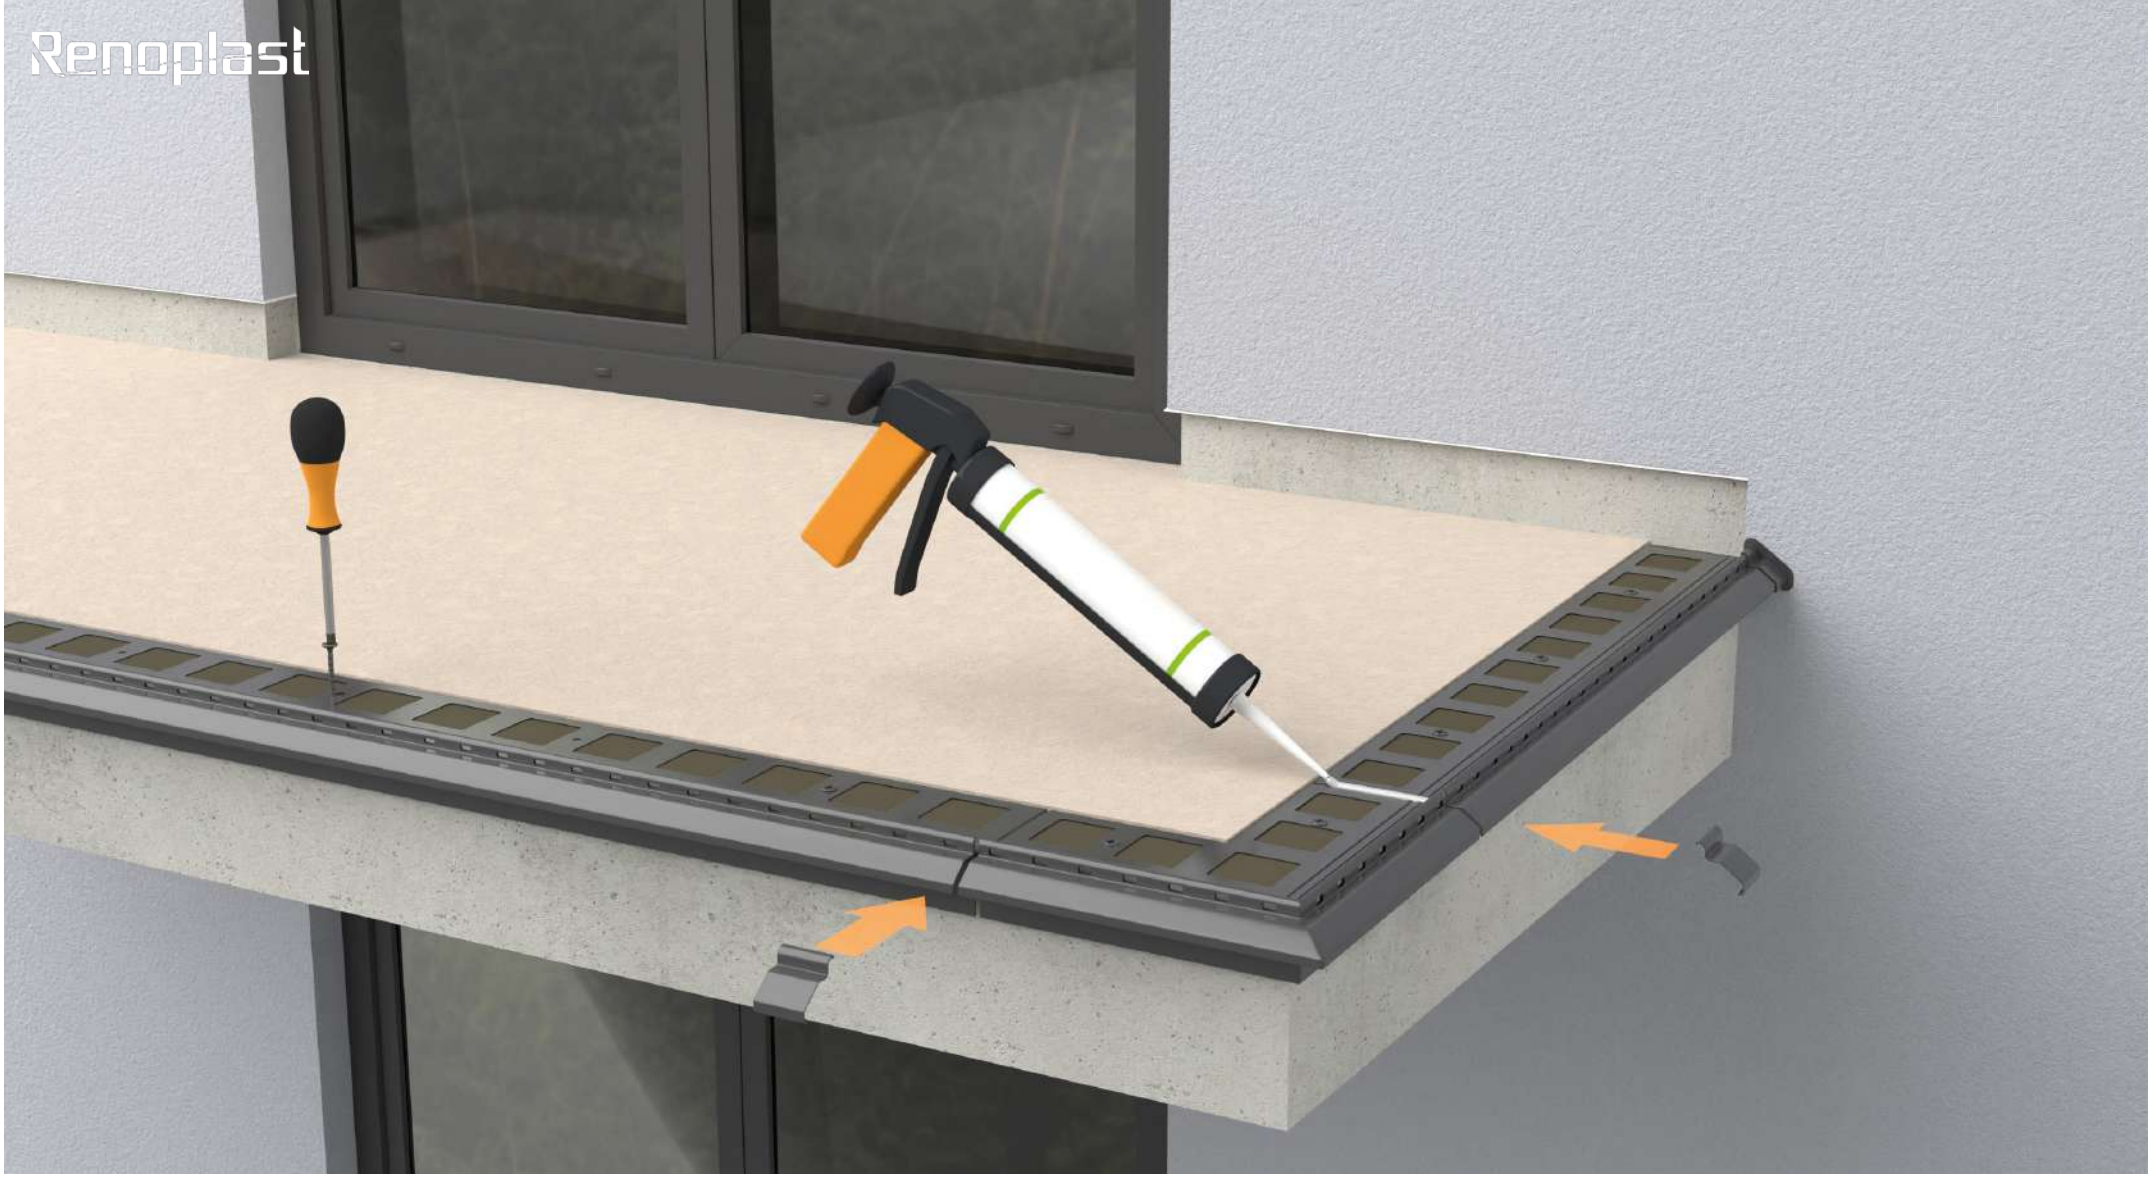


Sealing of joints and fitting LK20/LK20R drip edge clip over joints

Fill edging joints with a flexible, (e.g., polyurethane) sealant and snap the clips as shown.




Bonding of K20R edging with the screed

Drip edging is bonded to the screed by means of a layer of nonwoven fabric or mesh embedded in resin, or with a sealing tape embedded in the slurry. Follow the manufacturer’s recommendations.

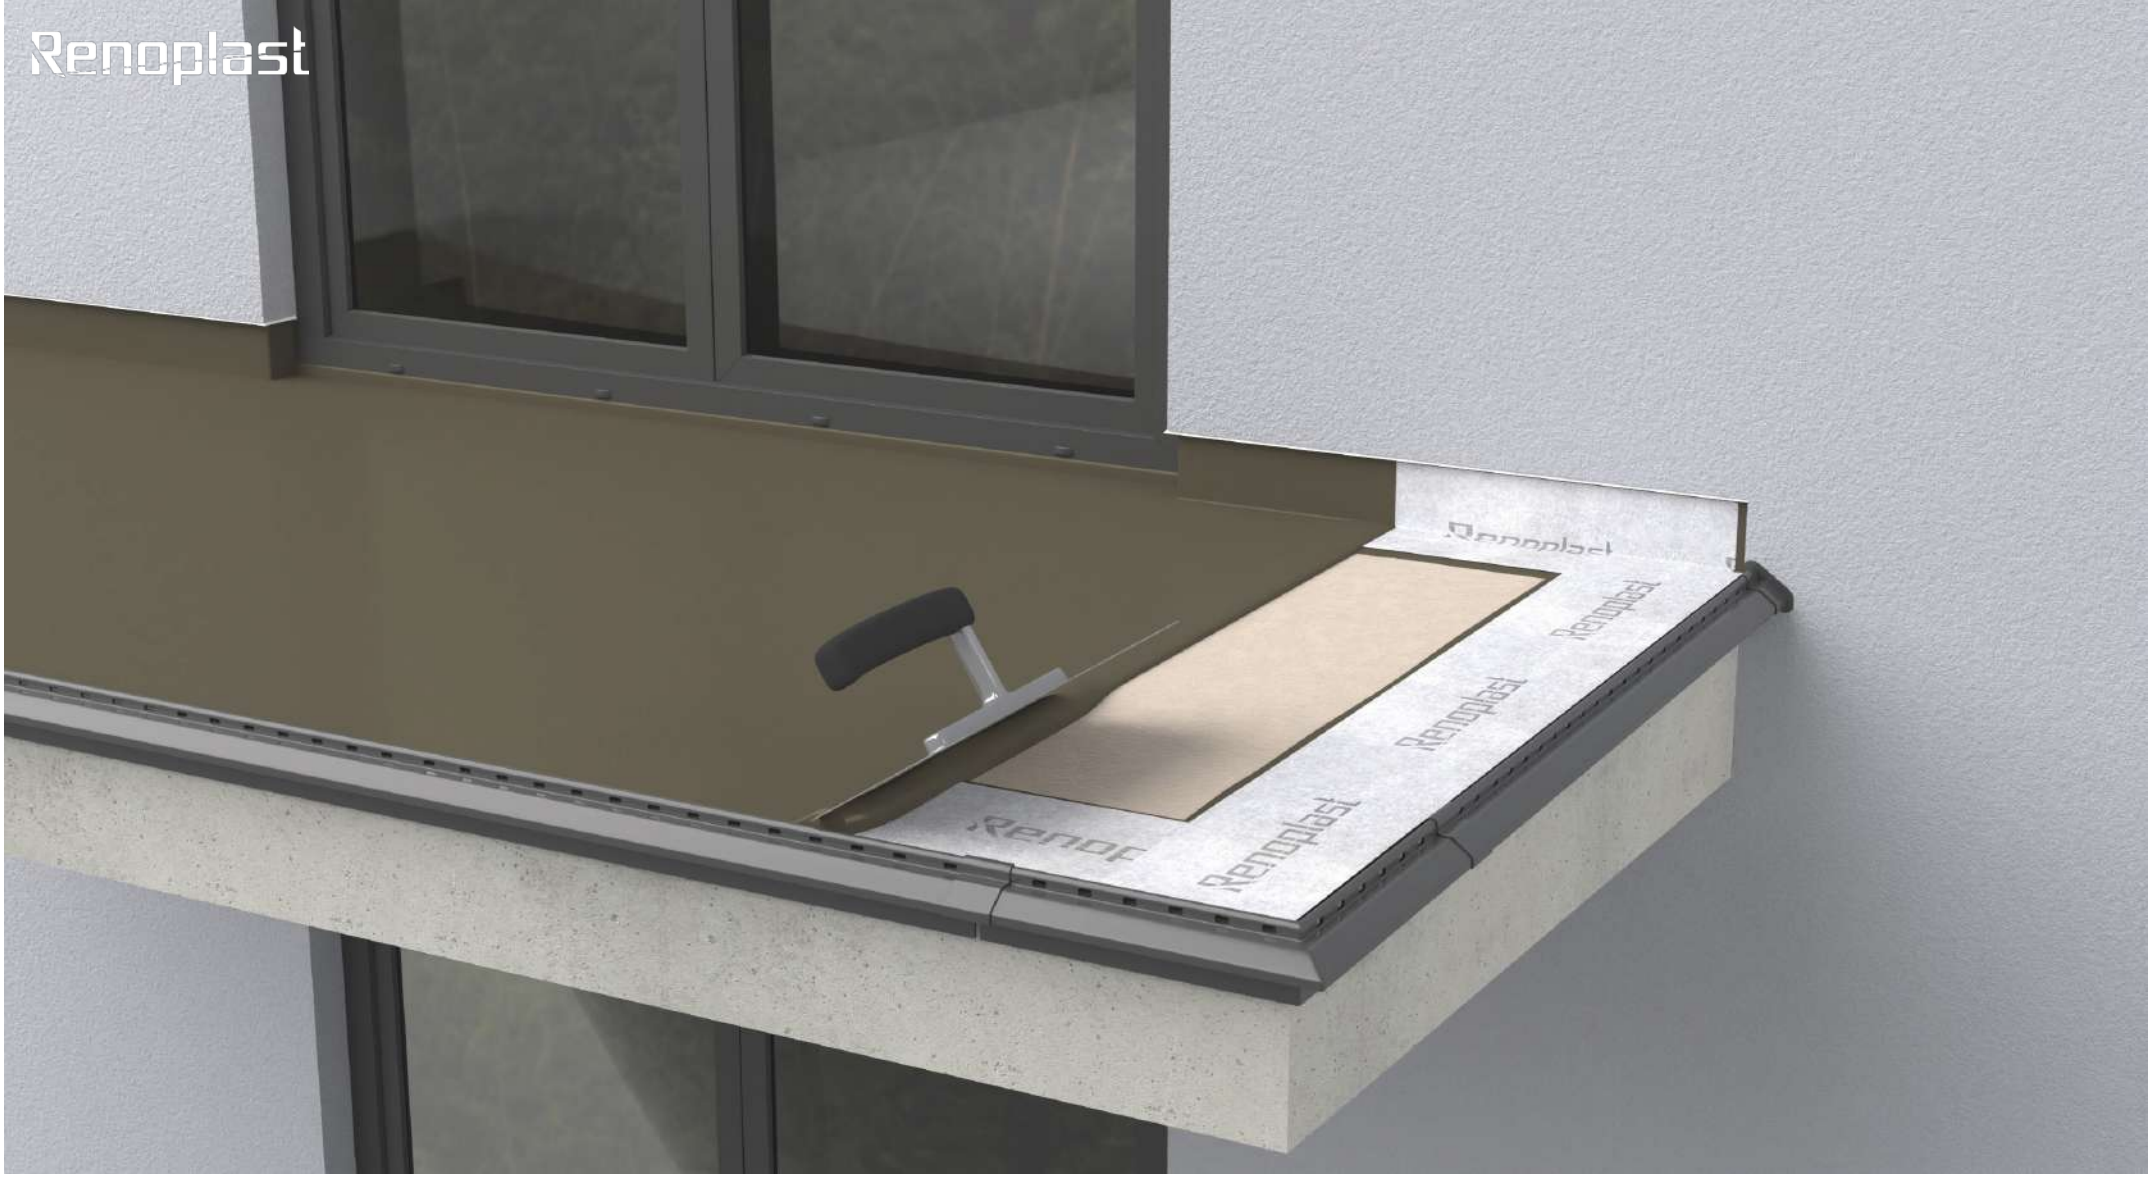


Waterproof sealant application

Apply waterproof sealant (sealing slurry or resin) all over the screed surface, using a roller or notched spreader, as per the installation procedure.

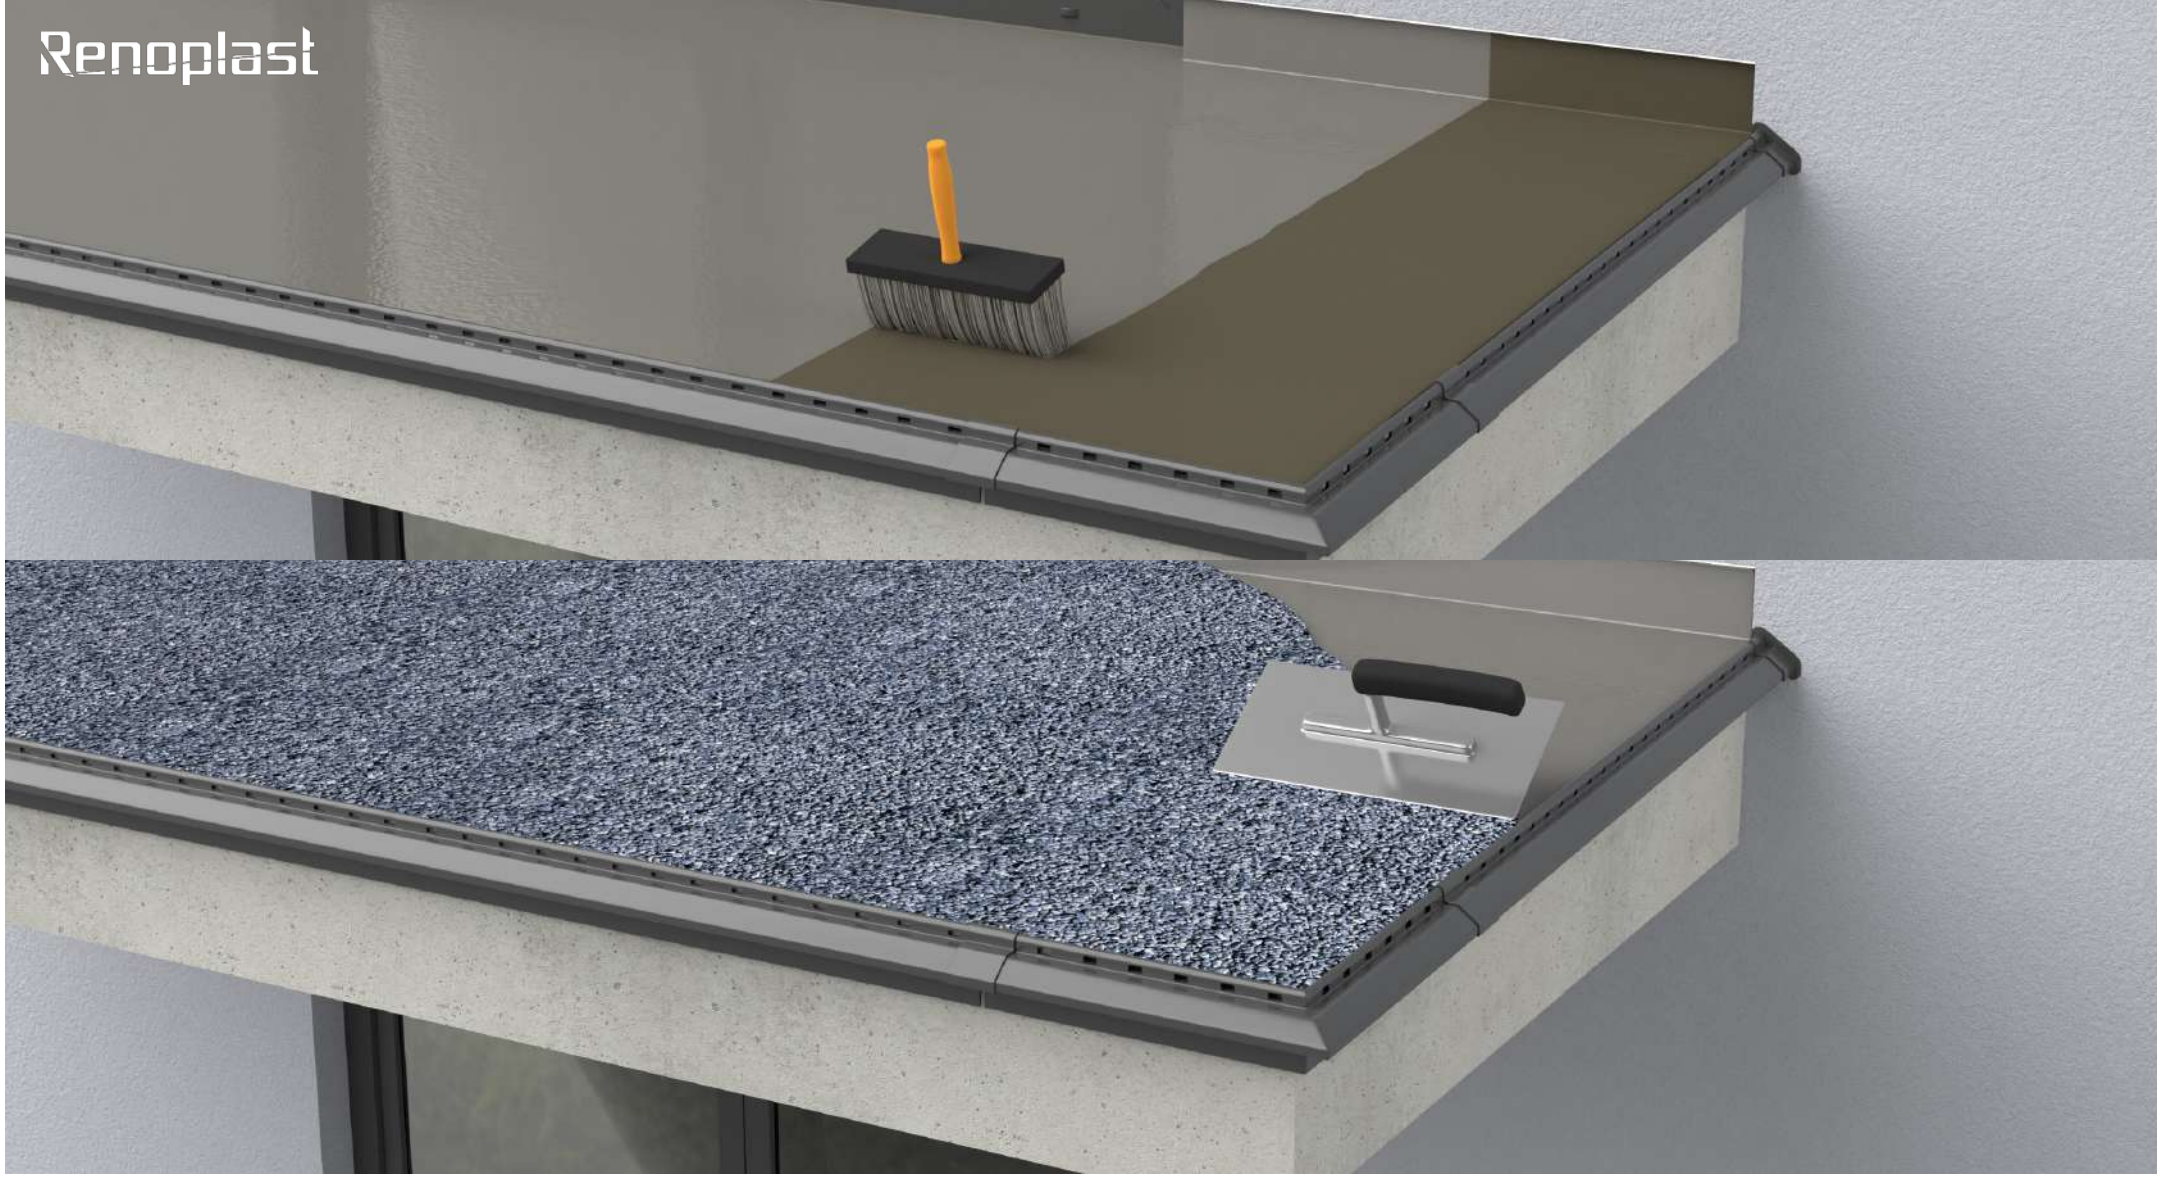


Laying resin-bound blend

Resin-bound blend may be laid once the waterproof sealant has cured. Follow the resin-bound blend installation procedure.

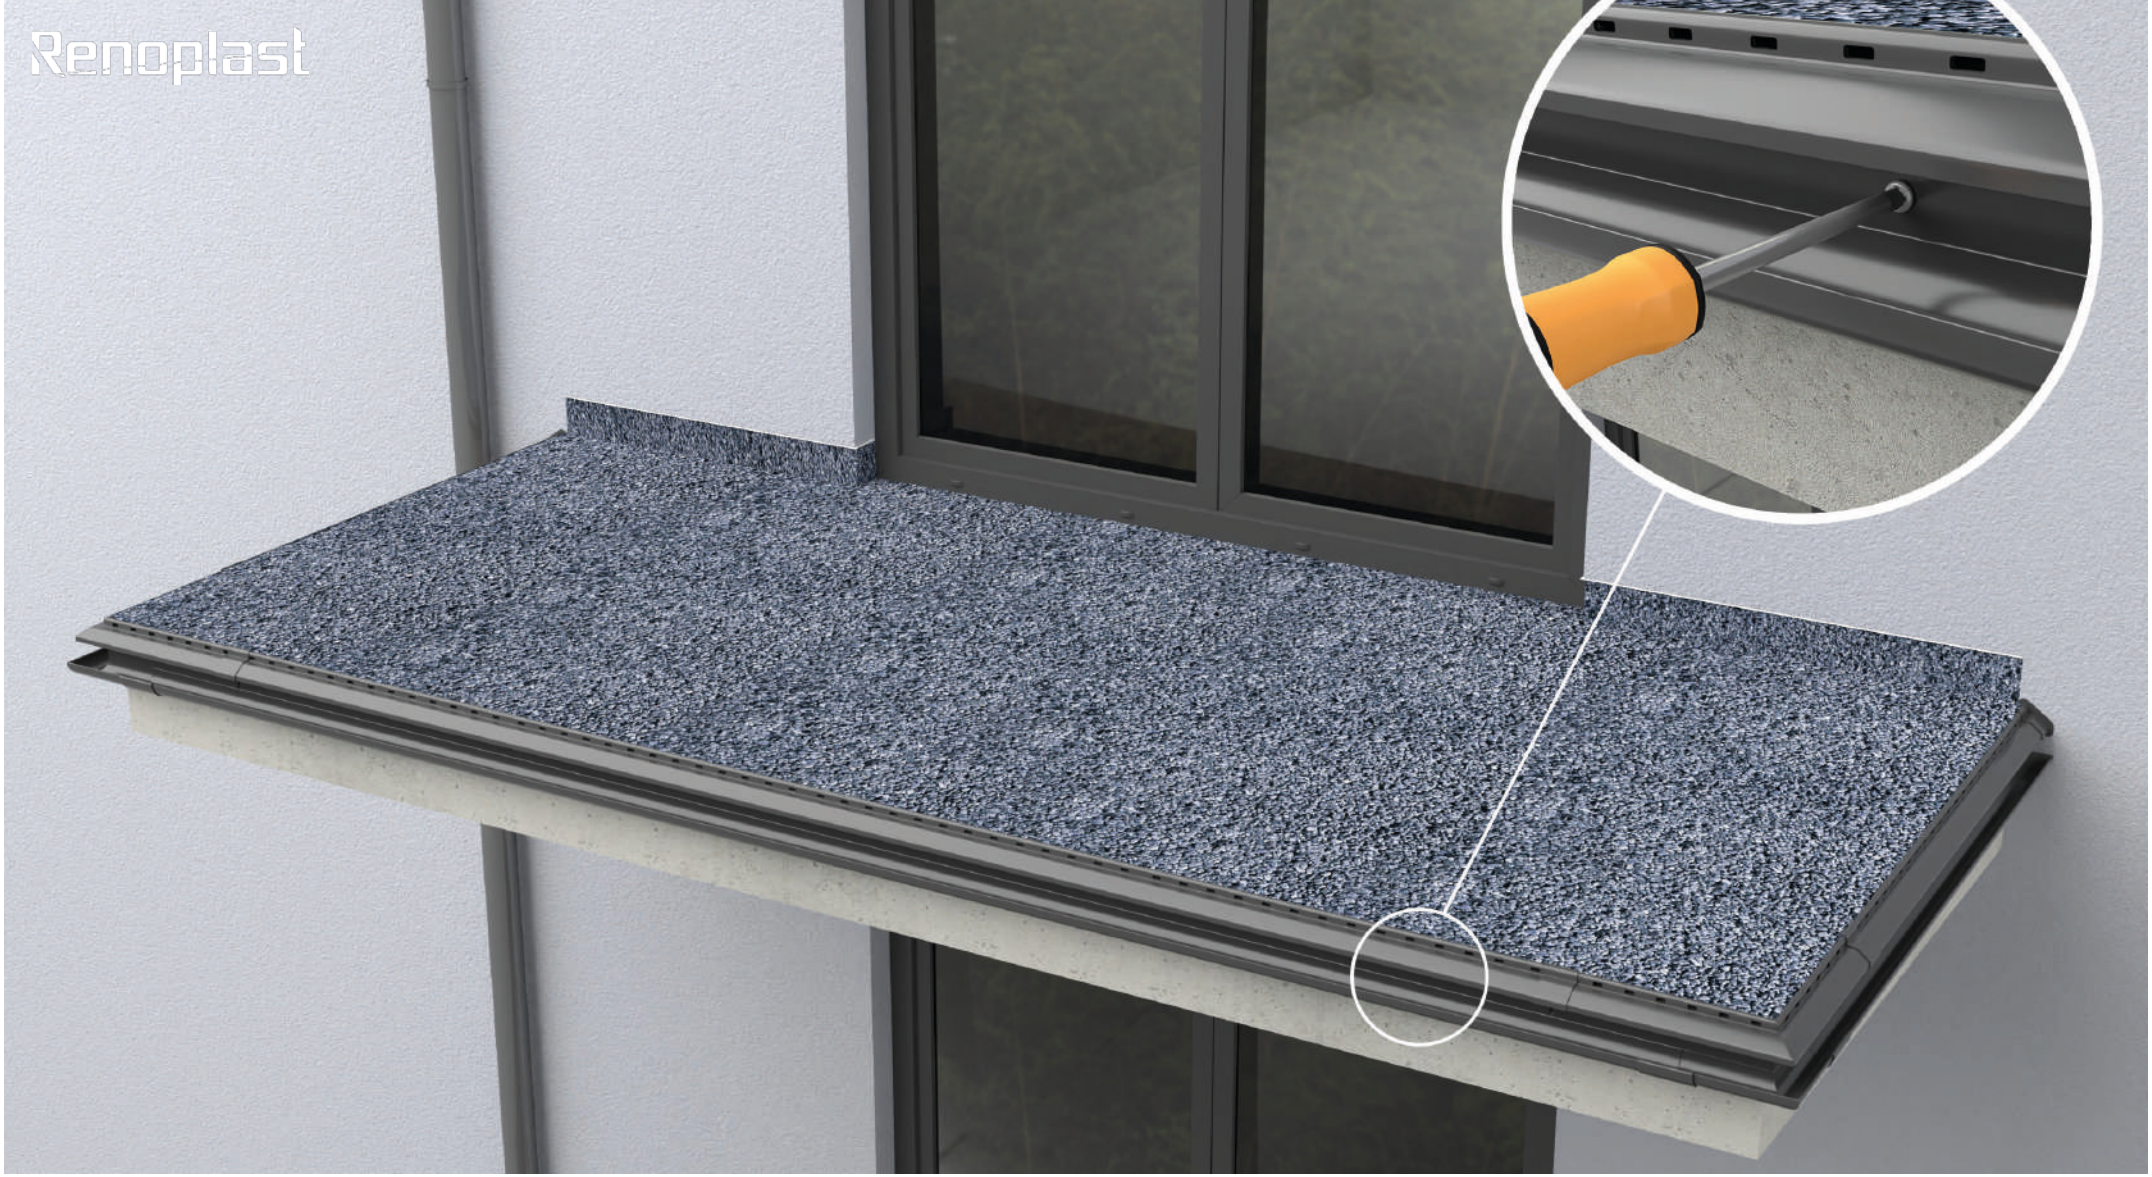

R50 gutter installation

K20R edgings are compatible with **Renoplast R50 aluminium gutter system**. **R50 gutters** are fixed directly to the fascia under **K20R drip edge** using self-drilling stainless steel screws (supplied with the gutter). **R50 gutter unions** should be fitted on all joints as per the **R50 gutter system** installation guide.

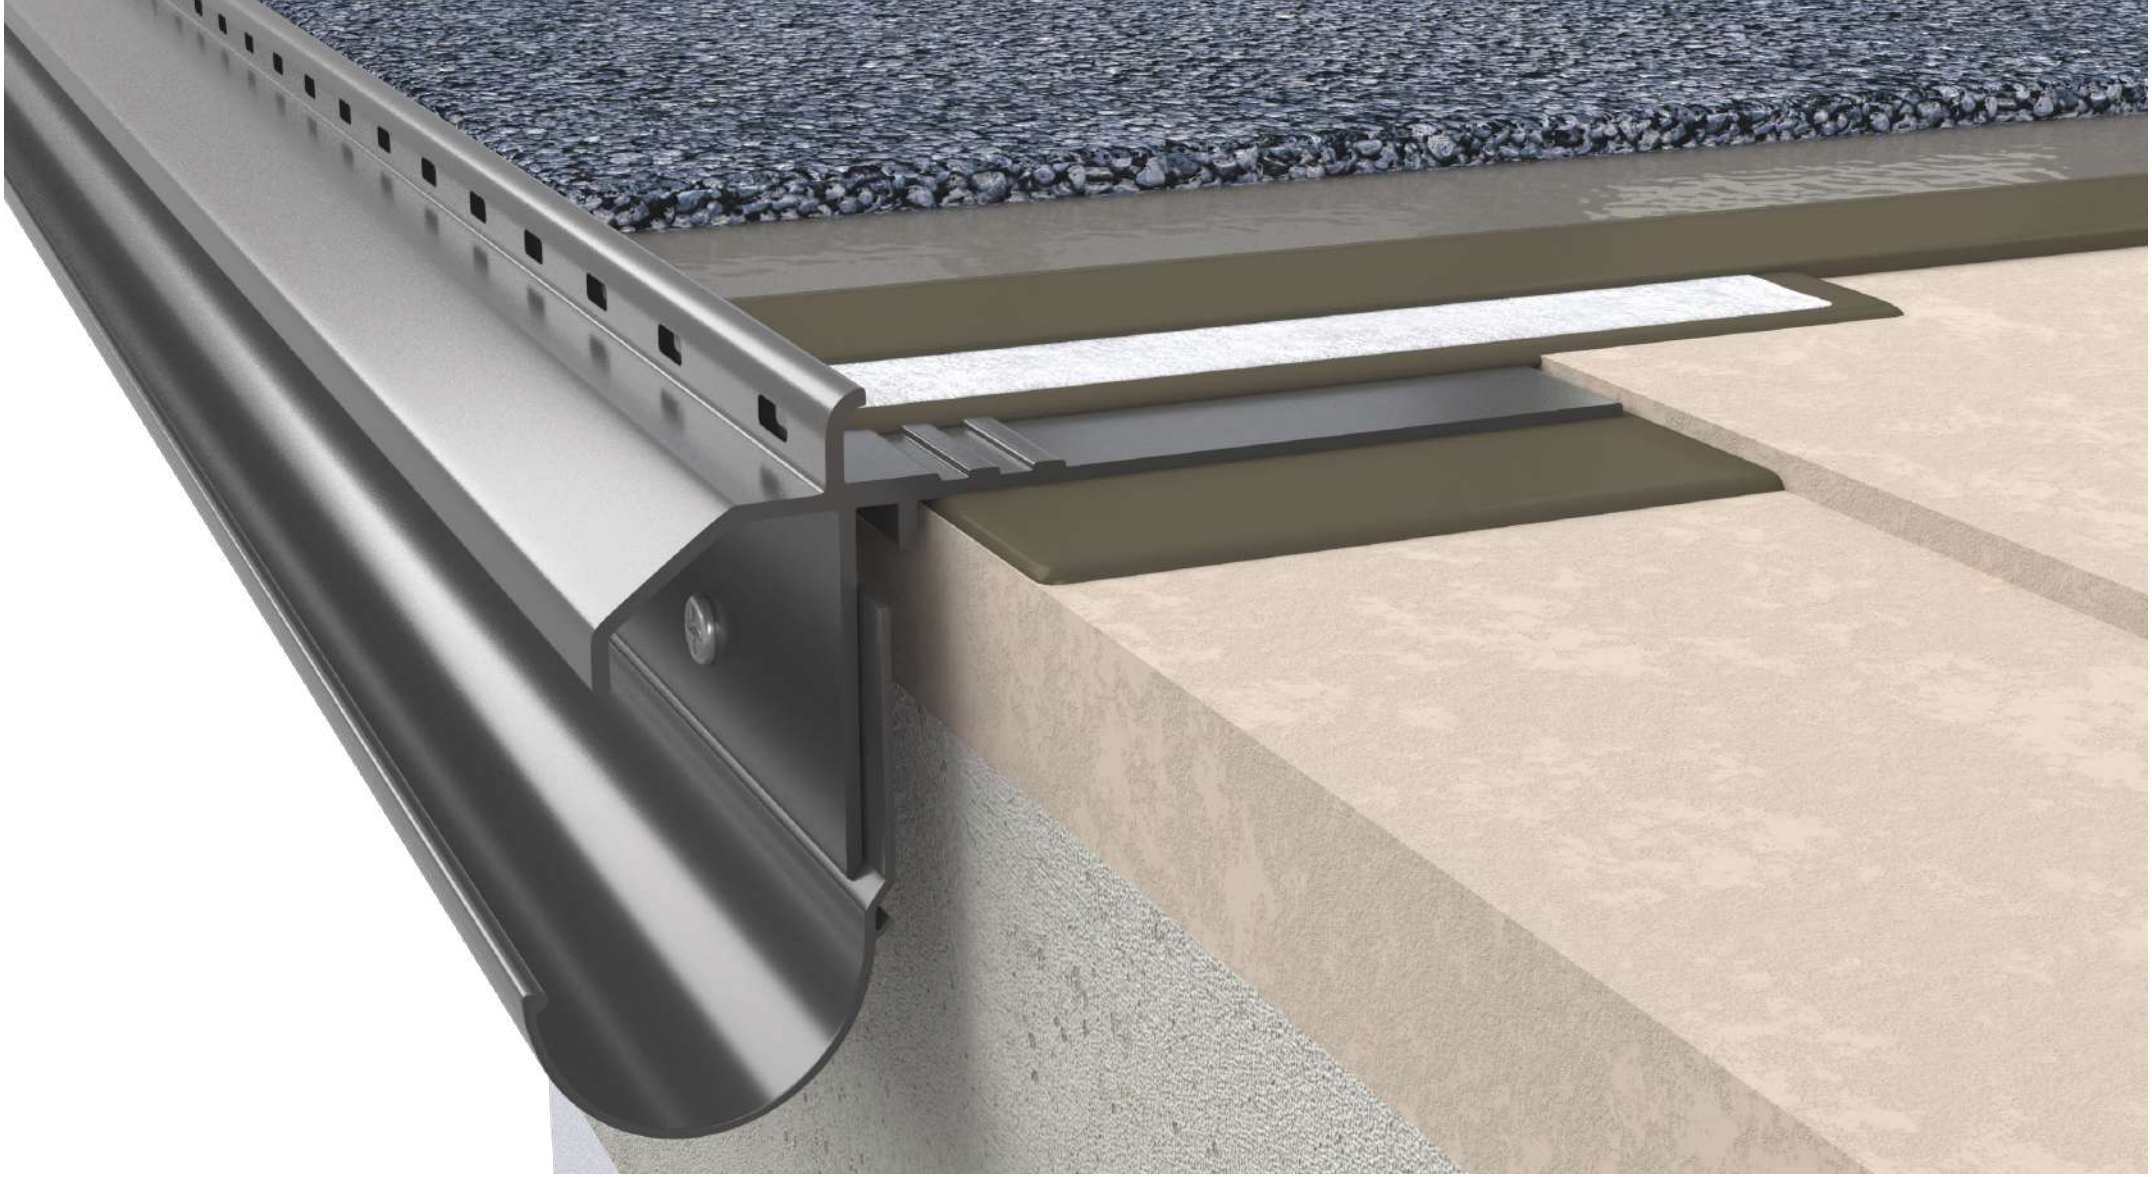

NOTES:

K20R drip edge has a 10 mm high upstand along the front edge to suit pebblestone flooring thickness. The front side features bottom drain holes to ensure efficient drainage of moisture from the resin floor layers. This guide gives some general recommendations for pebblestone flooring systems. Since different systems are available in the market, always follow the manufacturer's guidelines.

5 YEARS WARRANTY
100% SECURITY

CE

QUALICOAT
Inspired by architecture, trusted by professionals
| SEASIDE |

DESIGNED AND MANUFACTURED IN POLAND

Renoplast

www.renoplast.pl/en