



GRAND W60 system installation guide for balconies, patios and terraces surfaced with 4-6 cm thick concrete paving slabs resting on SMART pedestals



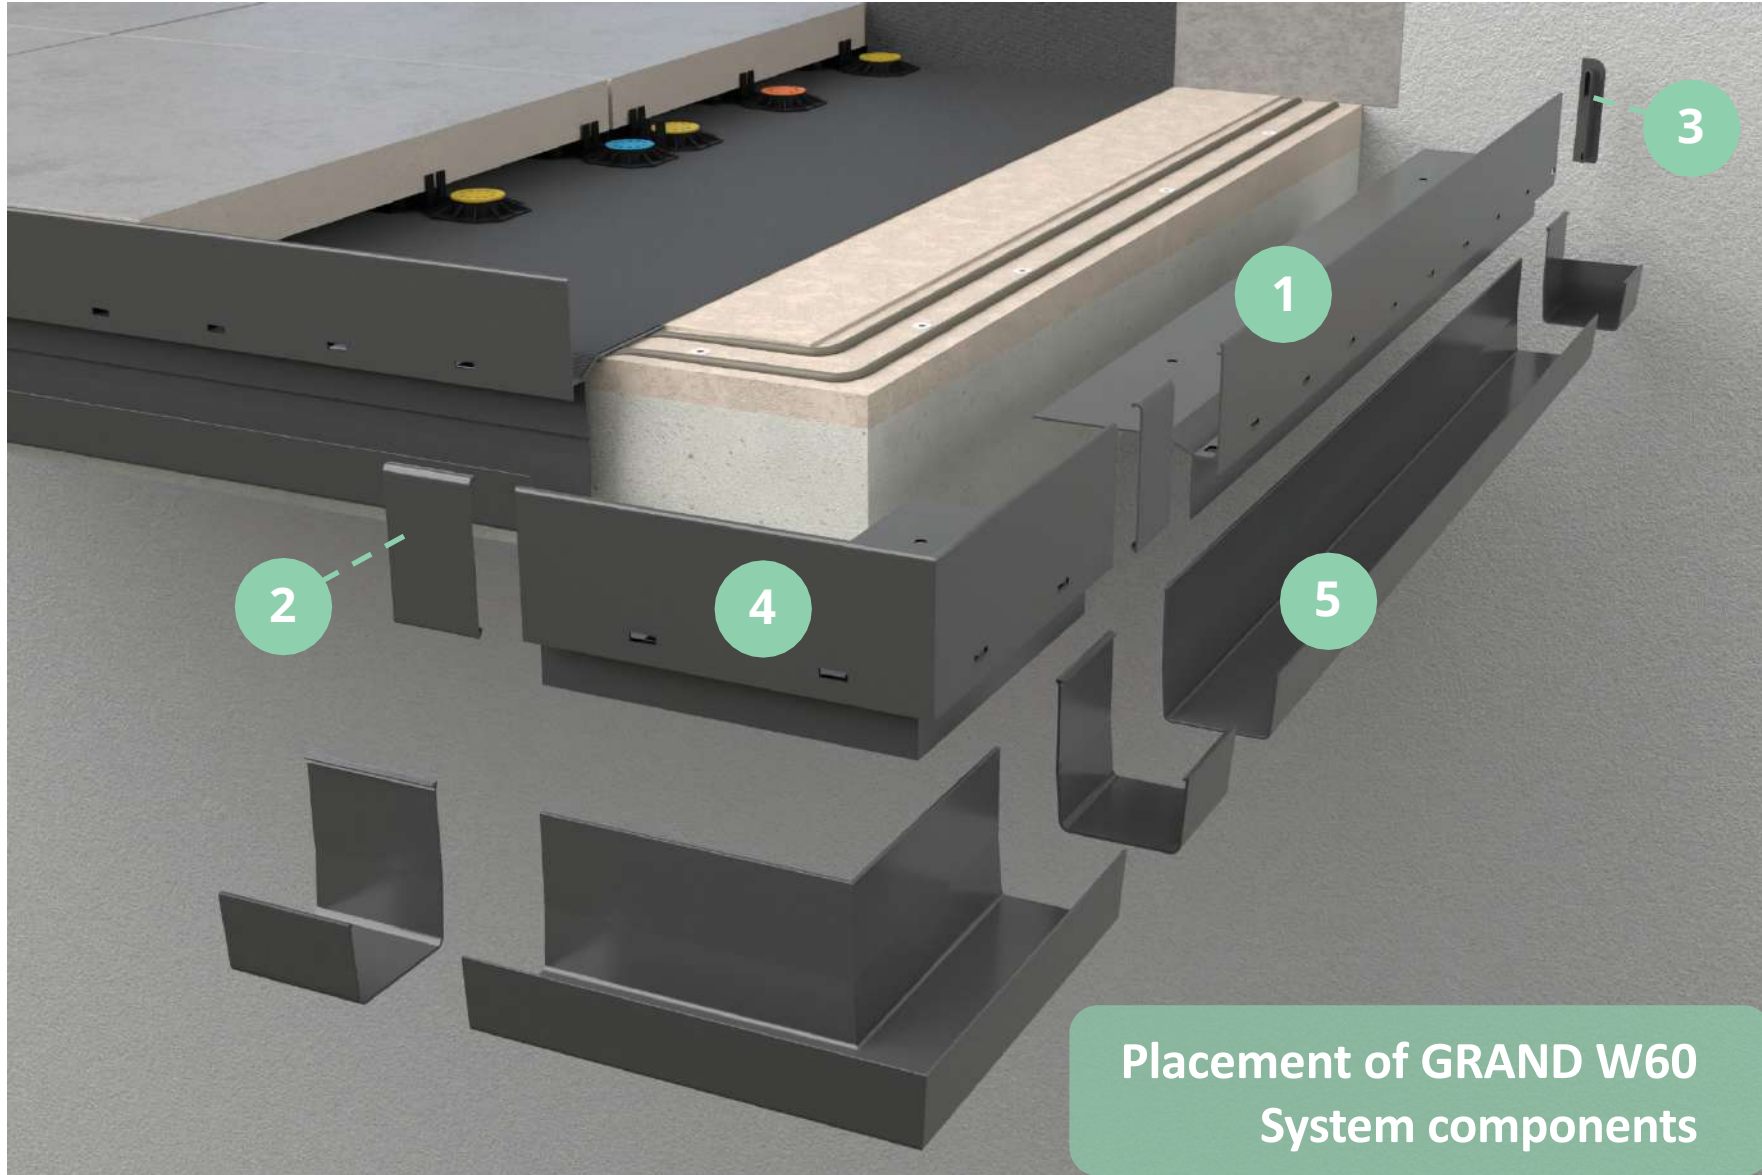

Placement of GRAND W60
System components

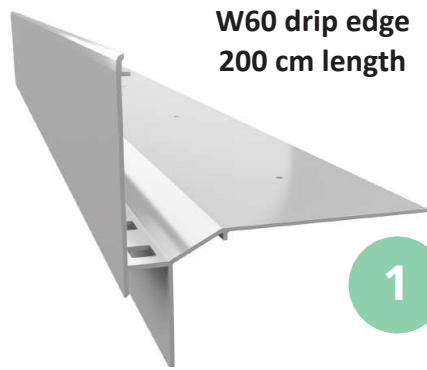

LW30/LW30R PLUS/
LW60/LW63
drip edge clip




OPW30/OPW30R PLUS/
OPW60/OPW63 R+L
wall protection end caps



W60 90
external corner



RK65
Box gutter

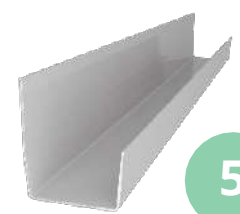




Balcony/terrace floor screed

The floor screed should be structurally sound and even, sloping 1.5 – 2% towards the balcony/terrace front edge. Along the balcony/terrace edge a 3 mm deep by 80 mm wide recess should be made in the screed to allow setting the drip edge flush with the screed top surface.



Smoothing the wall for membrane upstand installation

The upstand base should be sound and smooth.

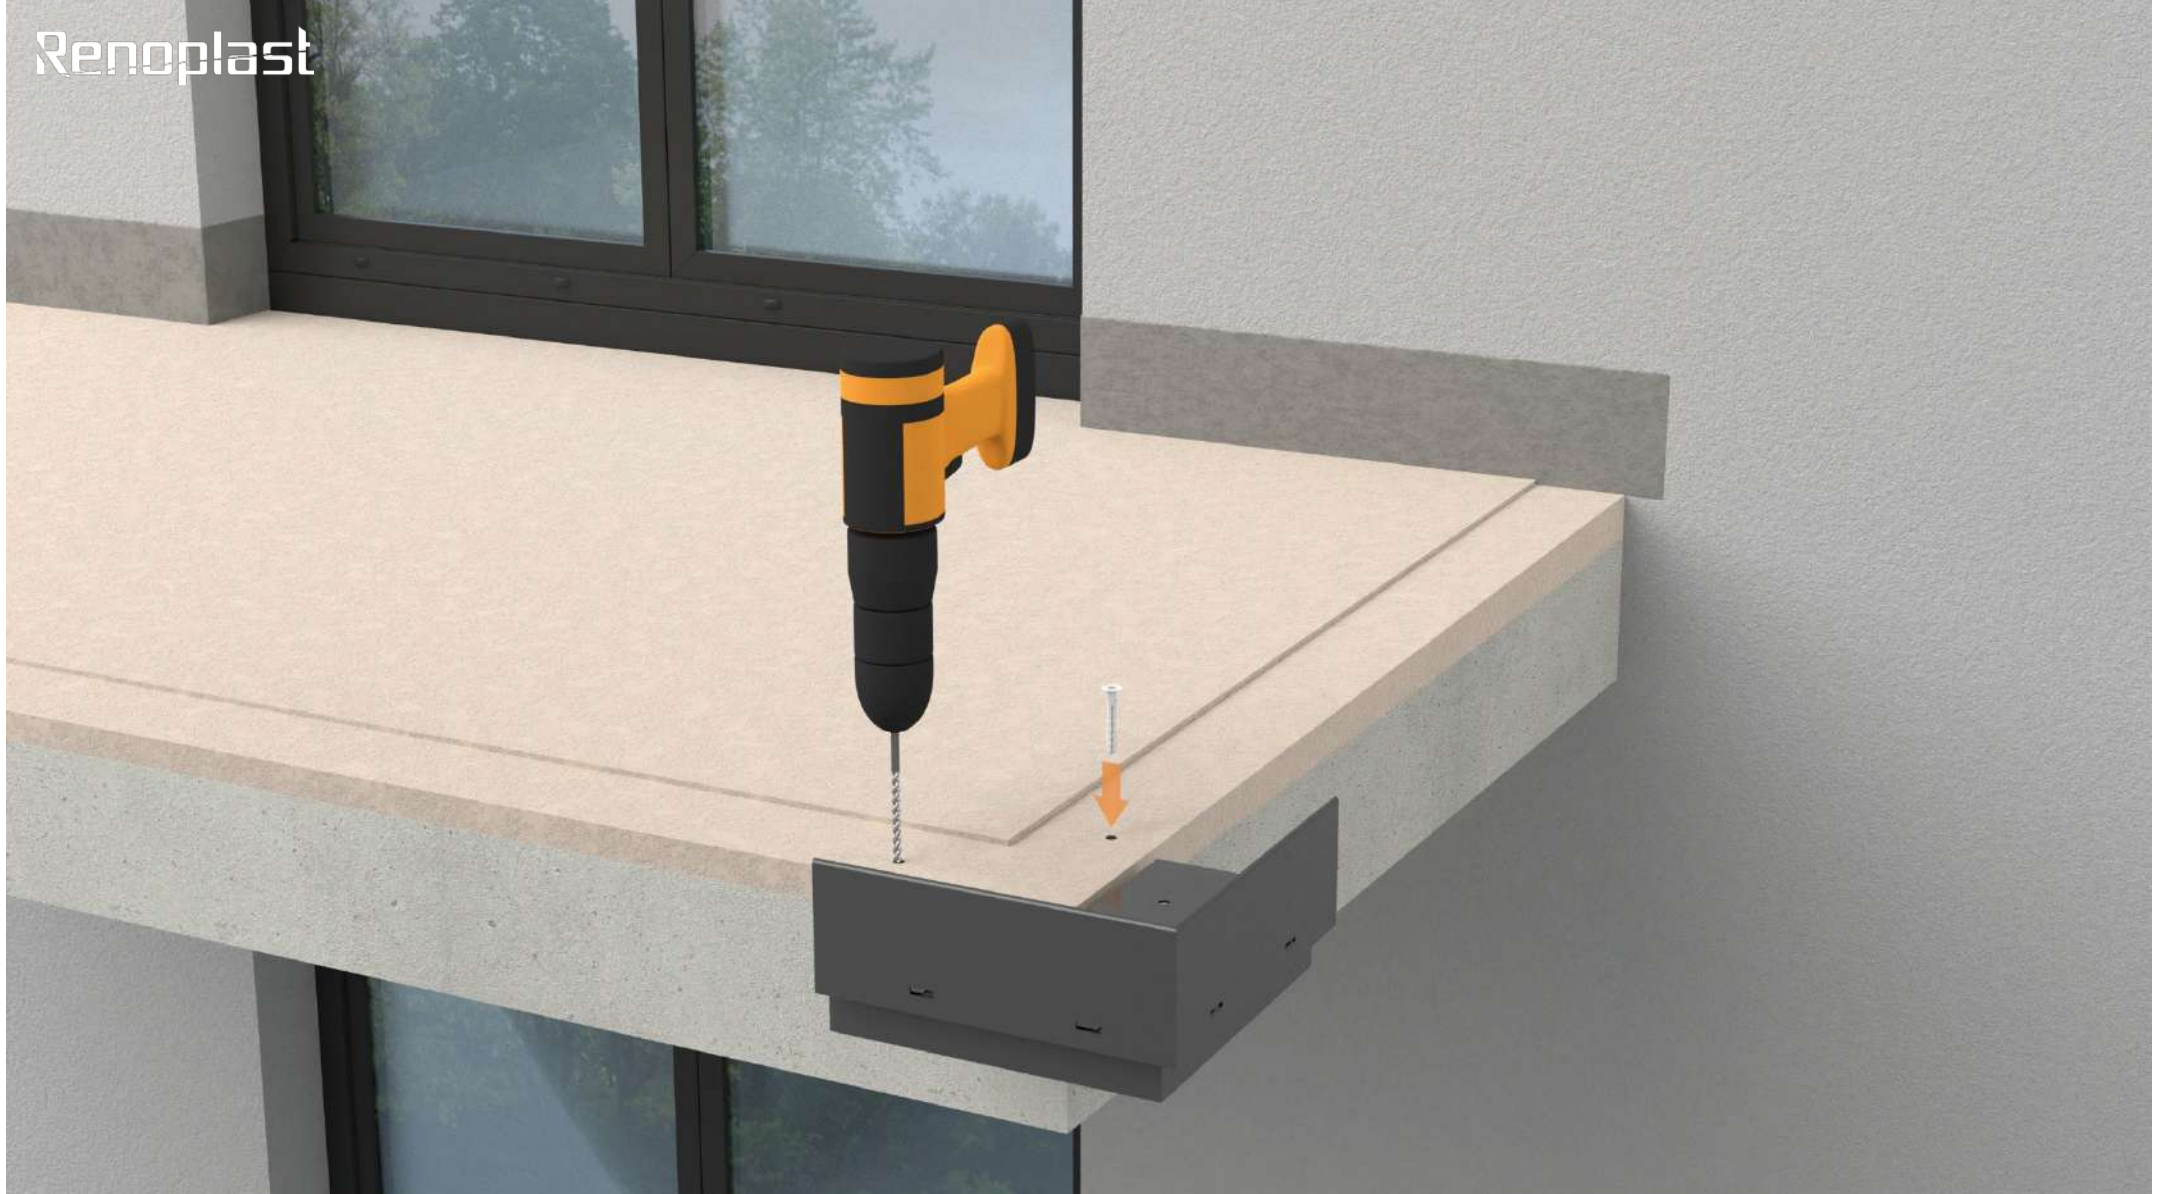


Pre-fitting W60 90 external corners

Start the installation by pre-fitting the external corners using the supplied plastic plugs.




Preparation of W60 drip edges

Measure straight lengths to cut the straight sections to the required length. Allow for ca. 2 mm wide expansion joints between adjacent drip edging sections. At walls leave sufficient space for fitting **OPW30/OPW30R PLUS/OPW60/OPW63 wall protection end caps**. For cutting use a metal handsaw or a circular saw equipped with an aluminium cutting disc. Other tools may damage the paint coat, which is considered unacceptable.

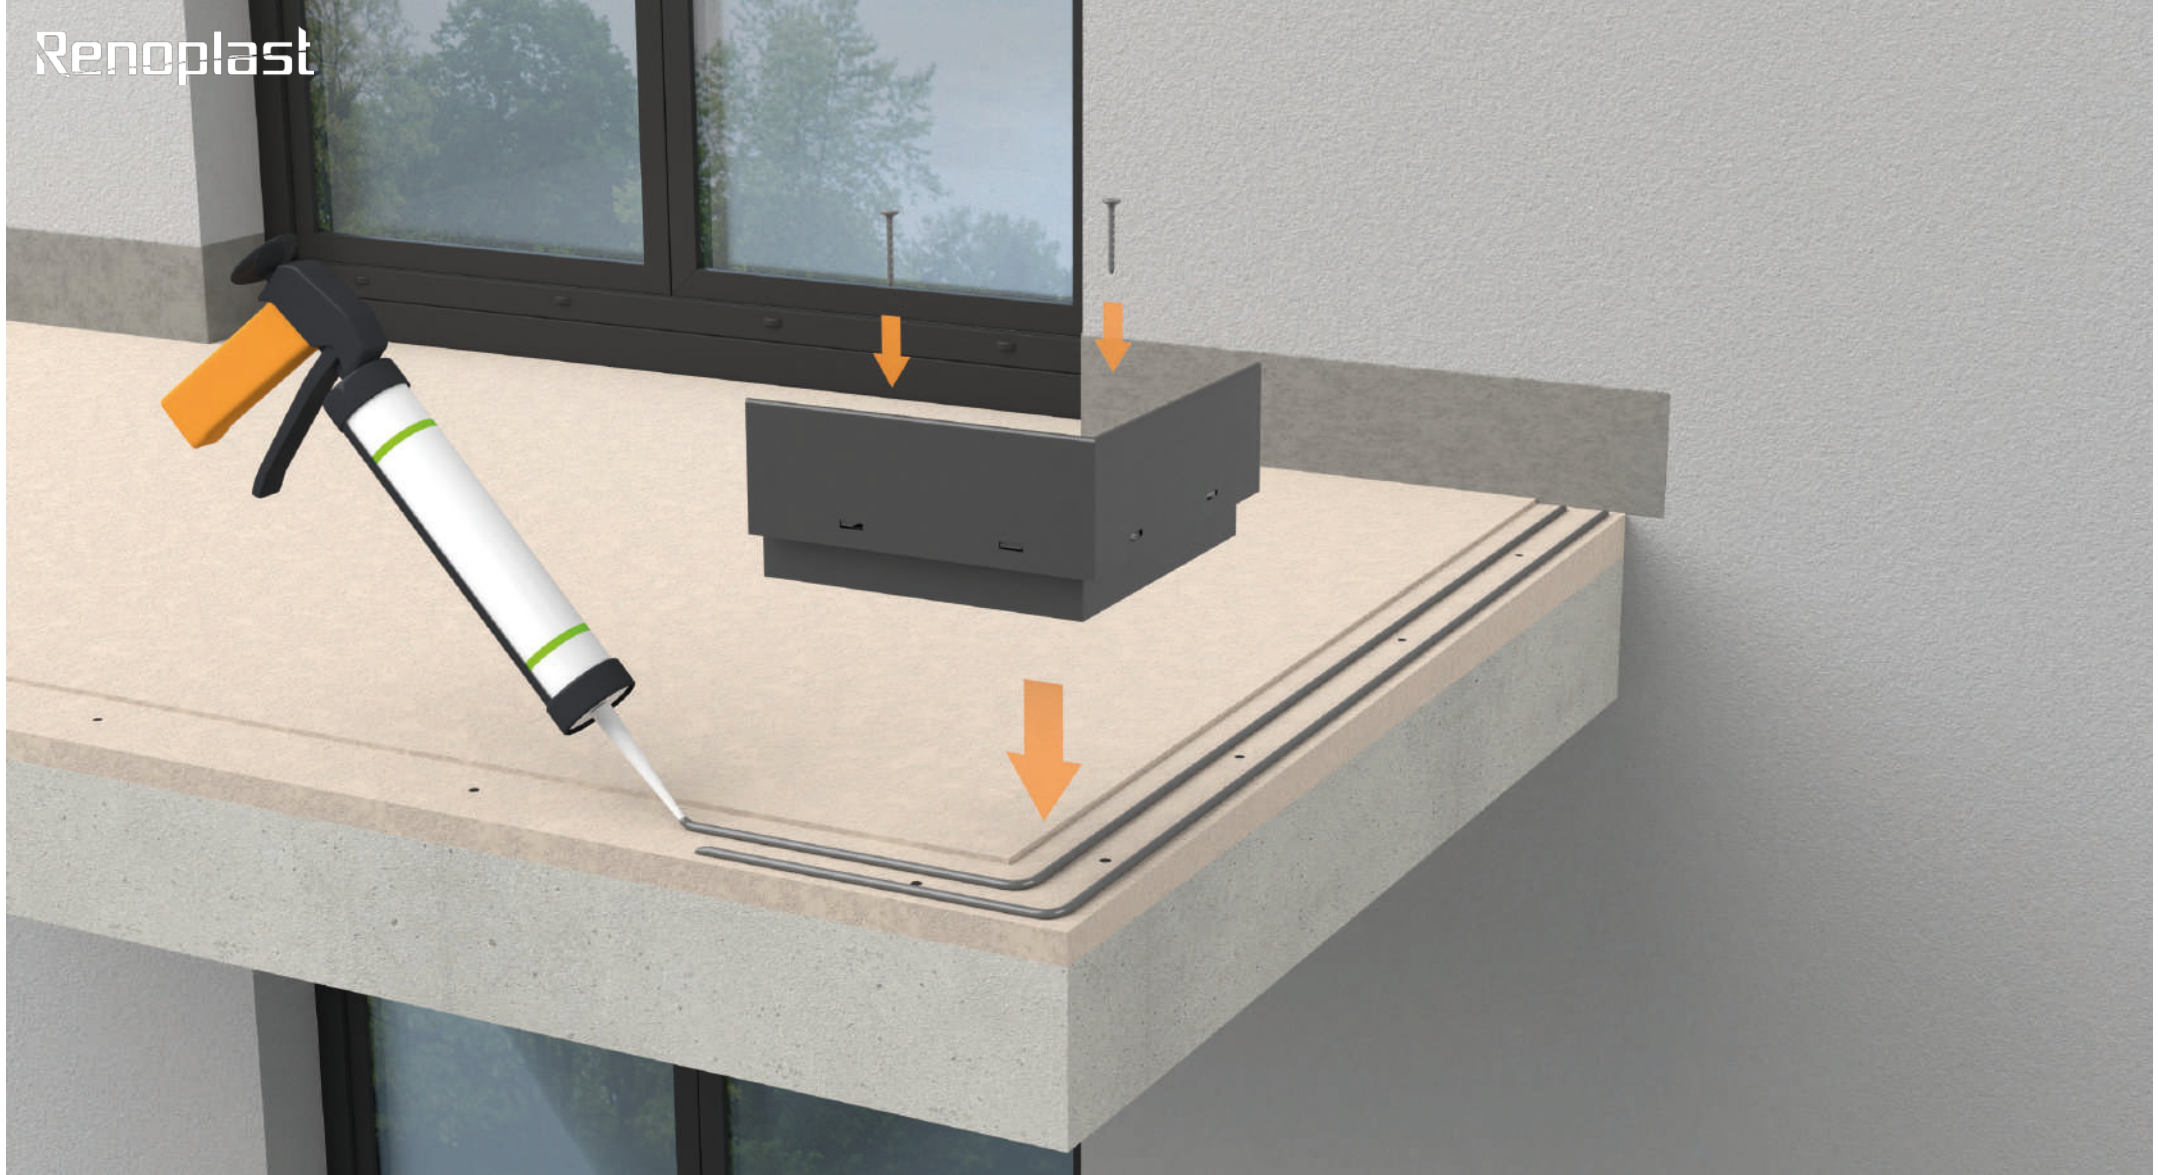


Fixing of W60 90 external corners

External corners should be bedded on elastic (such as polyurethane) sealant and fixed with the pre-installed plastic plugs.

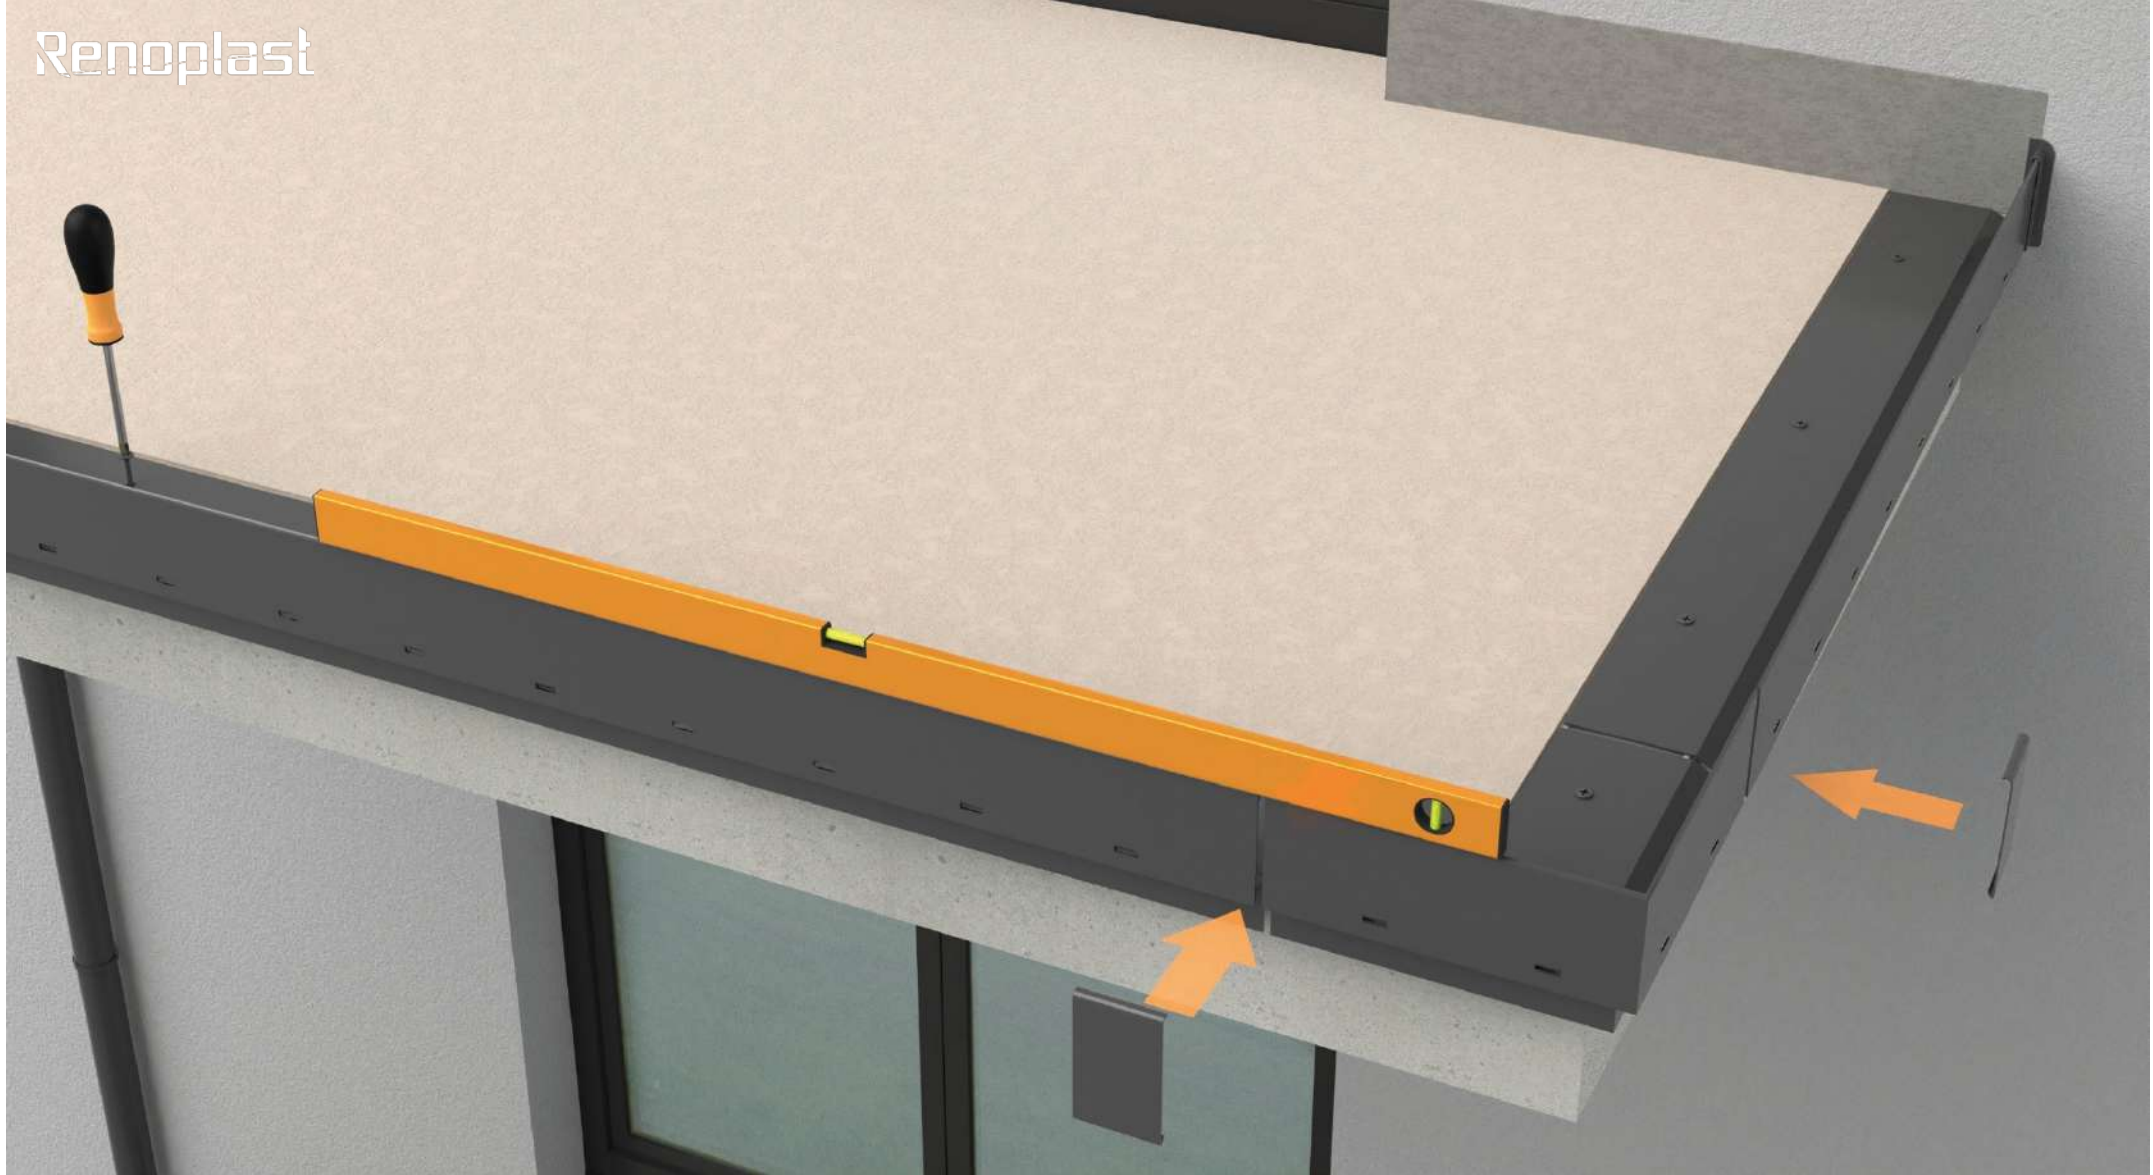


Fixing of W60 drip edges

Straight sections are fitted in the same way as corner pieces. Use a string line stretched between adjacent corners and a spirit level to ensure straight and level alignment.

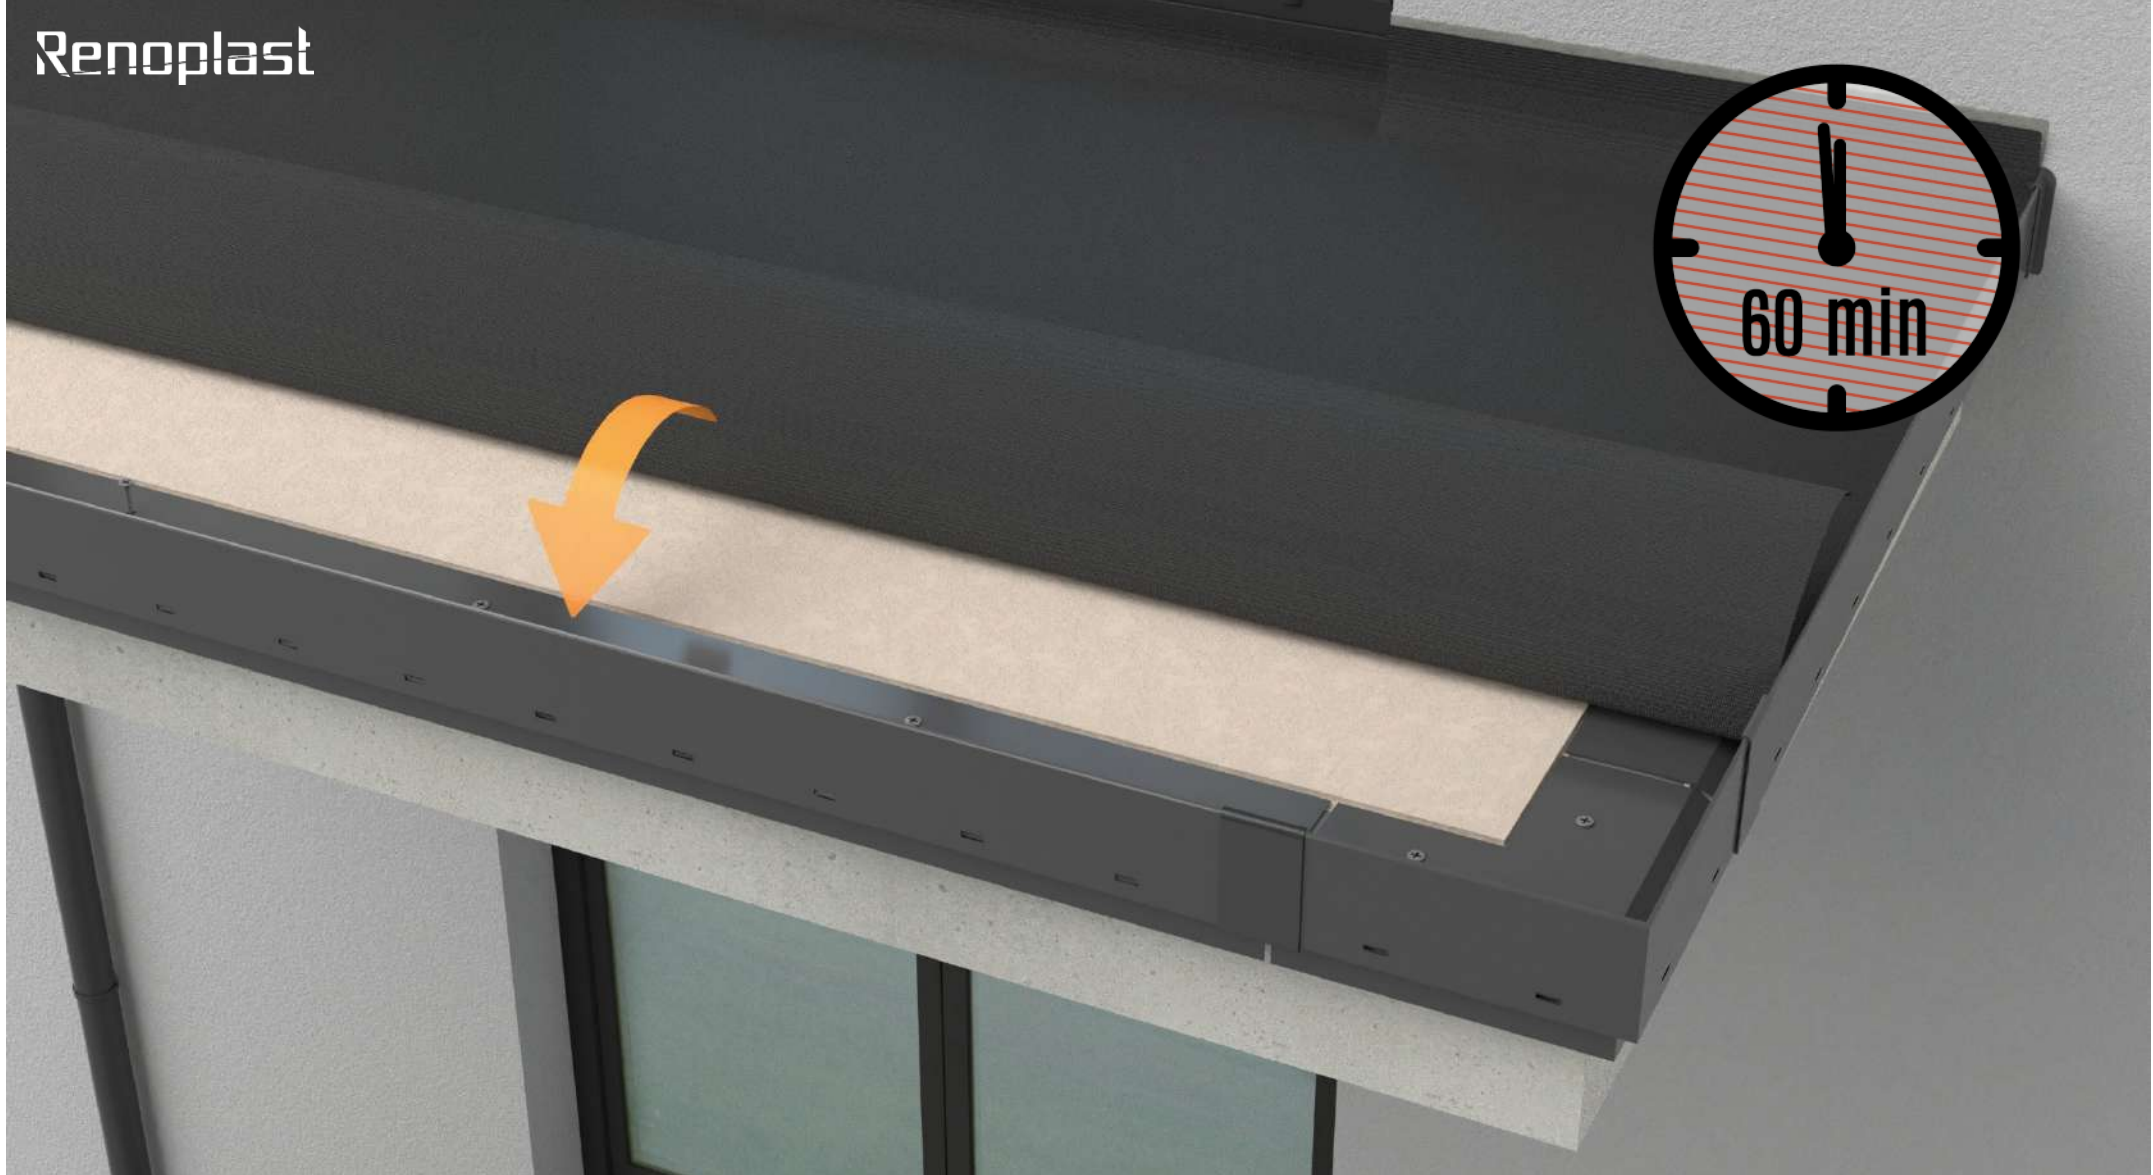

Renoplast EPDM membrane installation - preparation

Lay out the **Renoplast EPDM membrane** over the base and leave the membrane to relax for about 60 minutes to allow it expand naturally and remove any creases. Next cut the membrane to size, adding the drip edge bonding strip, wall upturns and laps between adjacent strips.

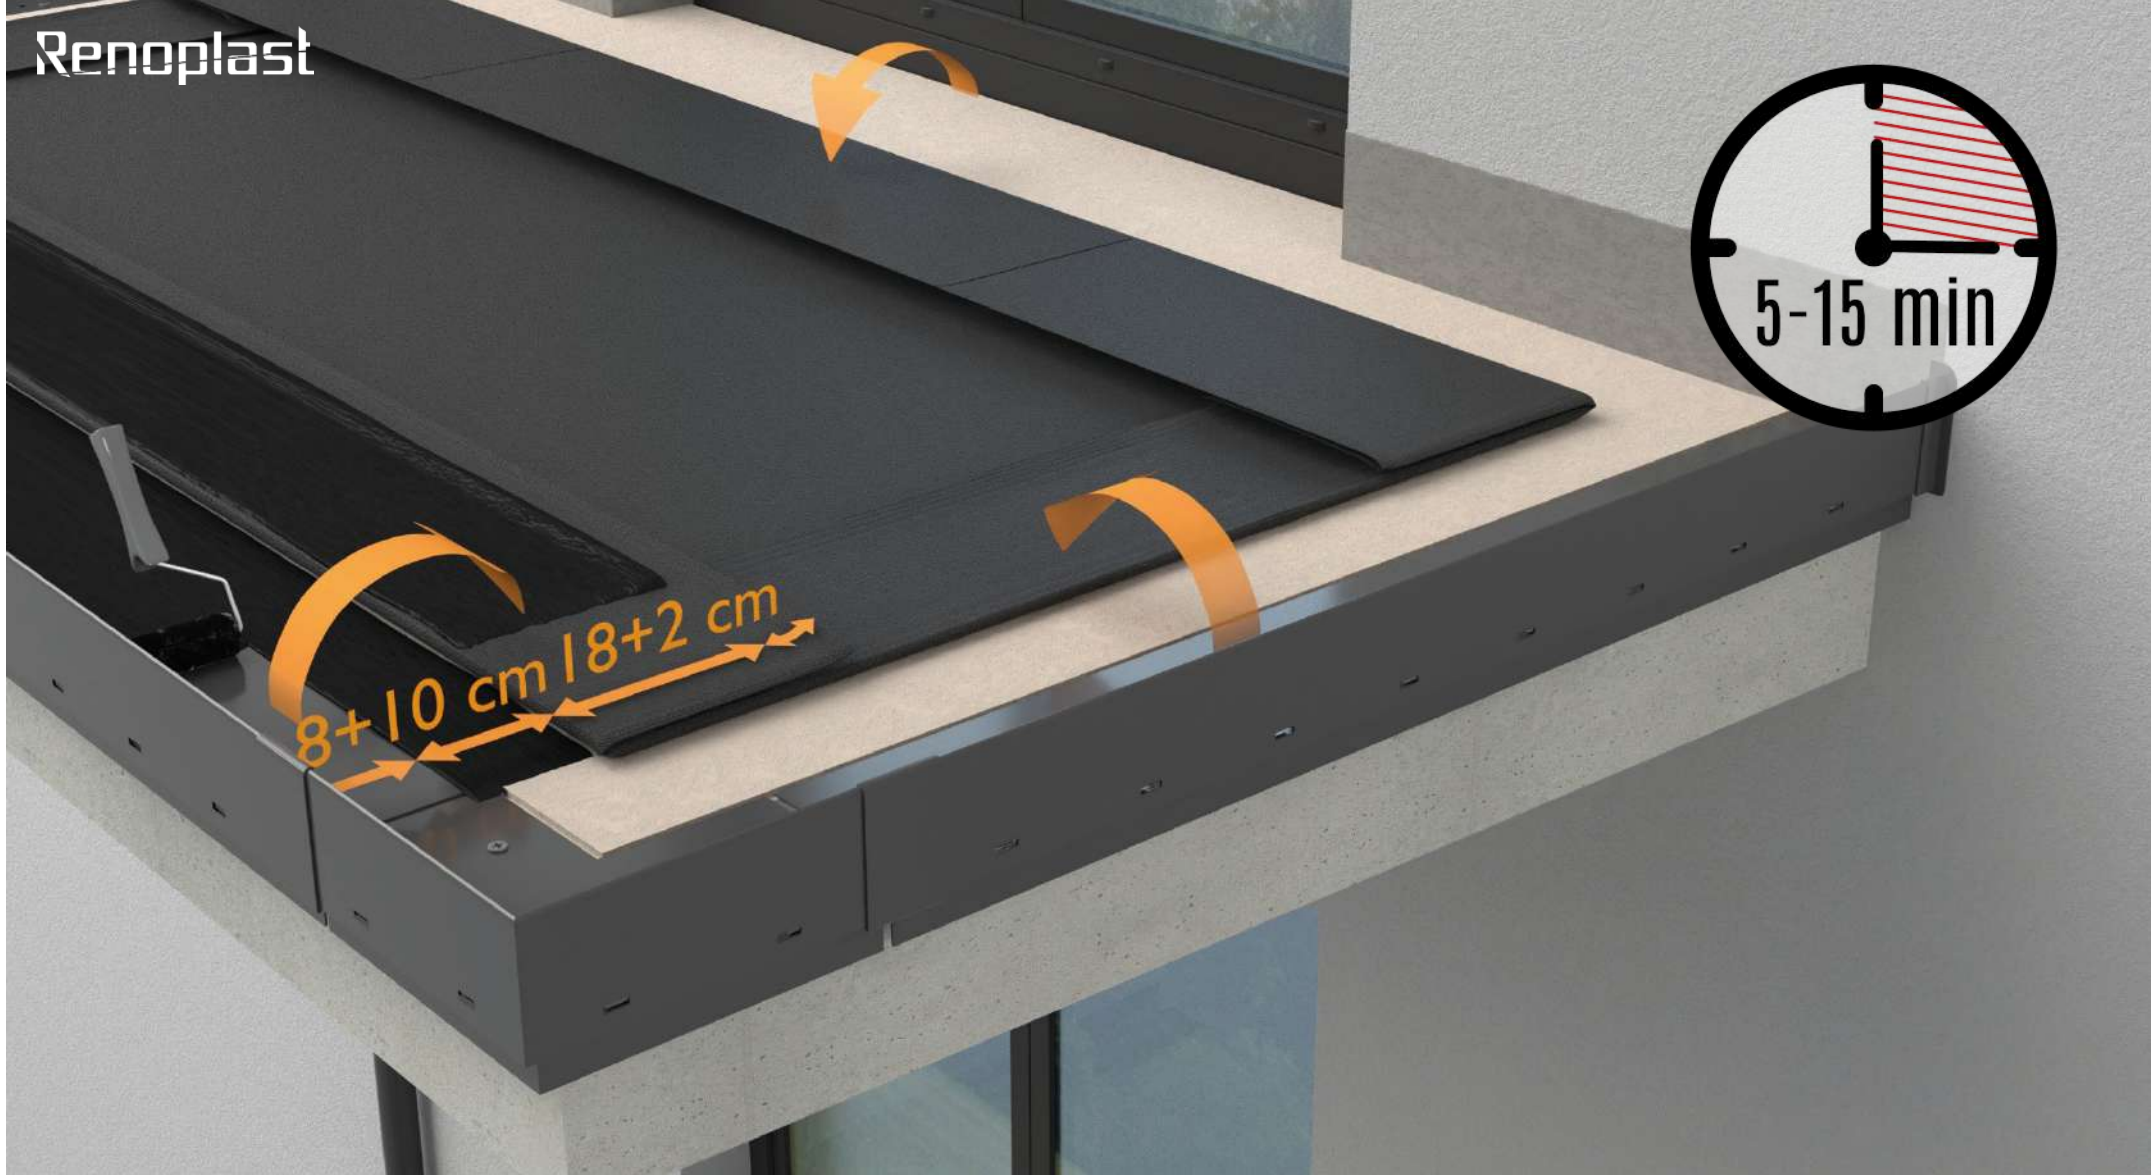

Bonding Renoplast EPDM membrane to substrates

For bonding **Renoplast EPDM membrane** to substrates use **RENOSTICK RS 10**. Apply the adhesive around the **Renoplast EPDM membrane** perimeter over a 20 cm wide strip, over the entire upstand width and onto the mating surfaces of **W60 drip edges** and **W60 90 external corners**. Apply the adhesive on both the membrane and on the substrate. Wait for ca. 5-15 minutes and then press the membrane against the substrate with a hand roller.




Sealing of Renoplast EPDM membrane joints

Upturn a ca. 2 cm wide strip along the membrane edges, apply flexible sealant and press firmly the membrane against the substrate until the sealant starts to squeeze out. Remember to seal both the membrane laps and drip edge joints.




Sealing of doorway and doorsill joints

At bottom doorway corners fit preformed **EPDM external corners**. Use **RENOSTICK RS 10** for bonding the corners and then apply adhesive sealant along joints. The joint between **Renoplast EPDM membrane** and doorsill edge should be sealed with mesh reinforced **self-adhesive EPDM tape with butyl strip**.

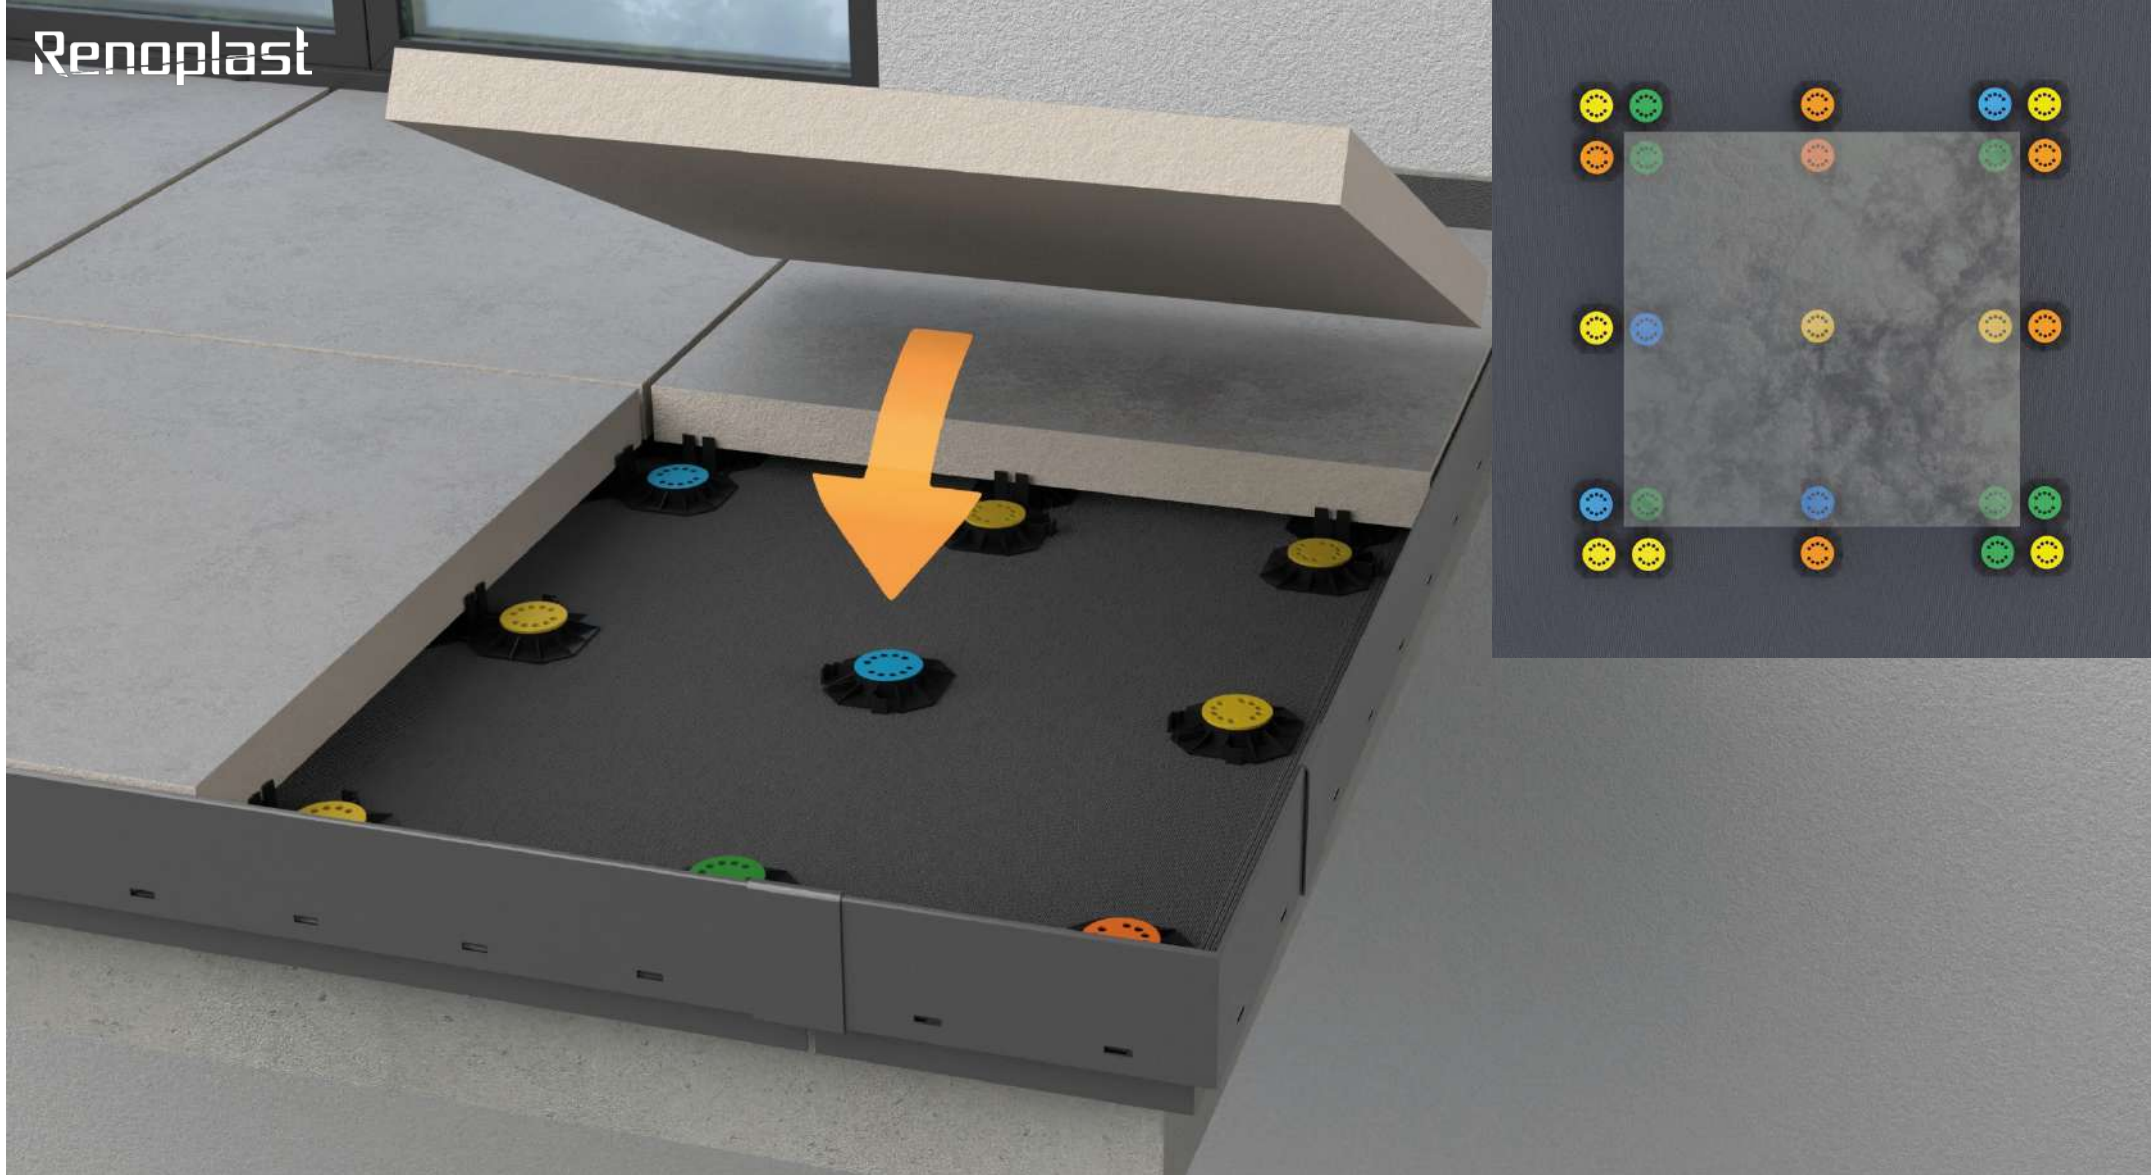

Paving with the use of SMART pedestals

The concrete paving slabs are laid on **SMART** pedestals. The paving slabs must be declared by the manufacturer as suitable for pedestal paving application and should be placed on pedestals spaced by not more than 30 cm between centres.

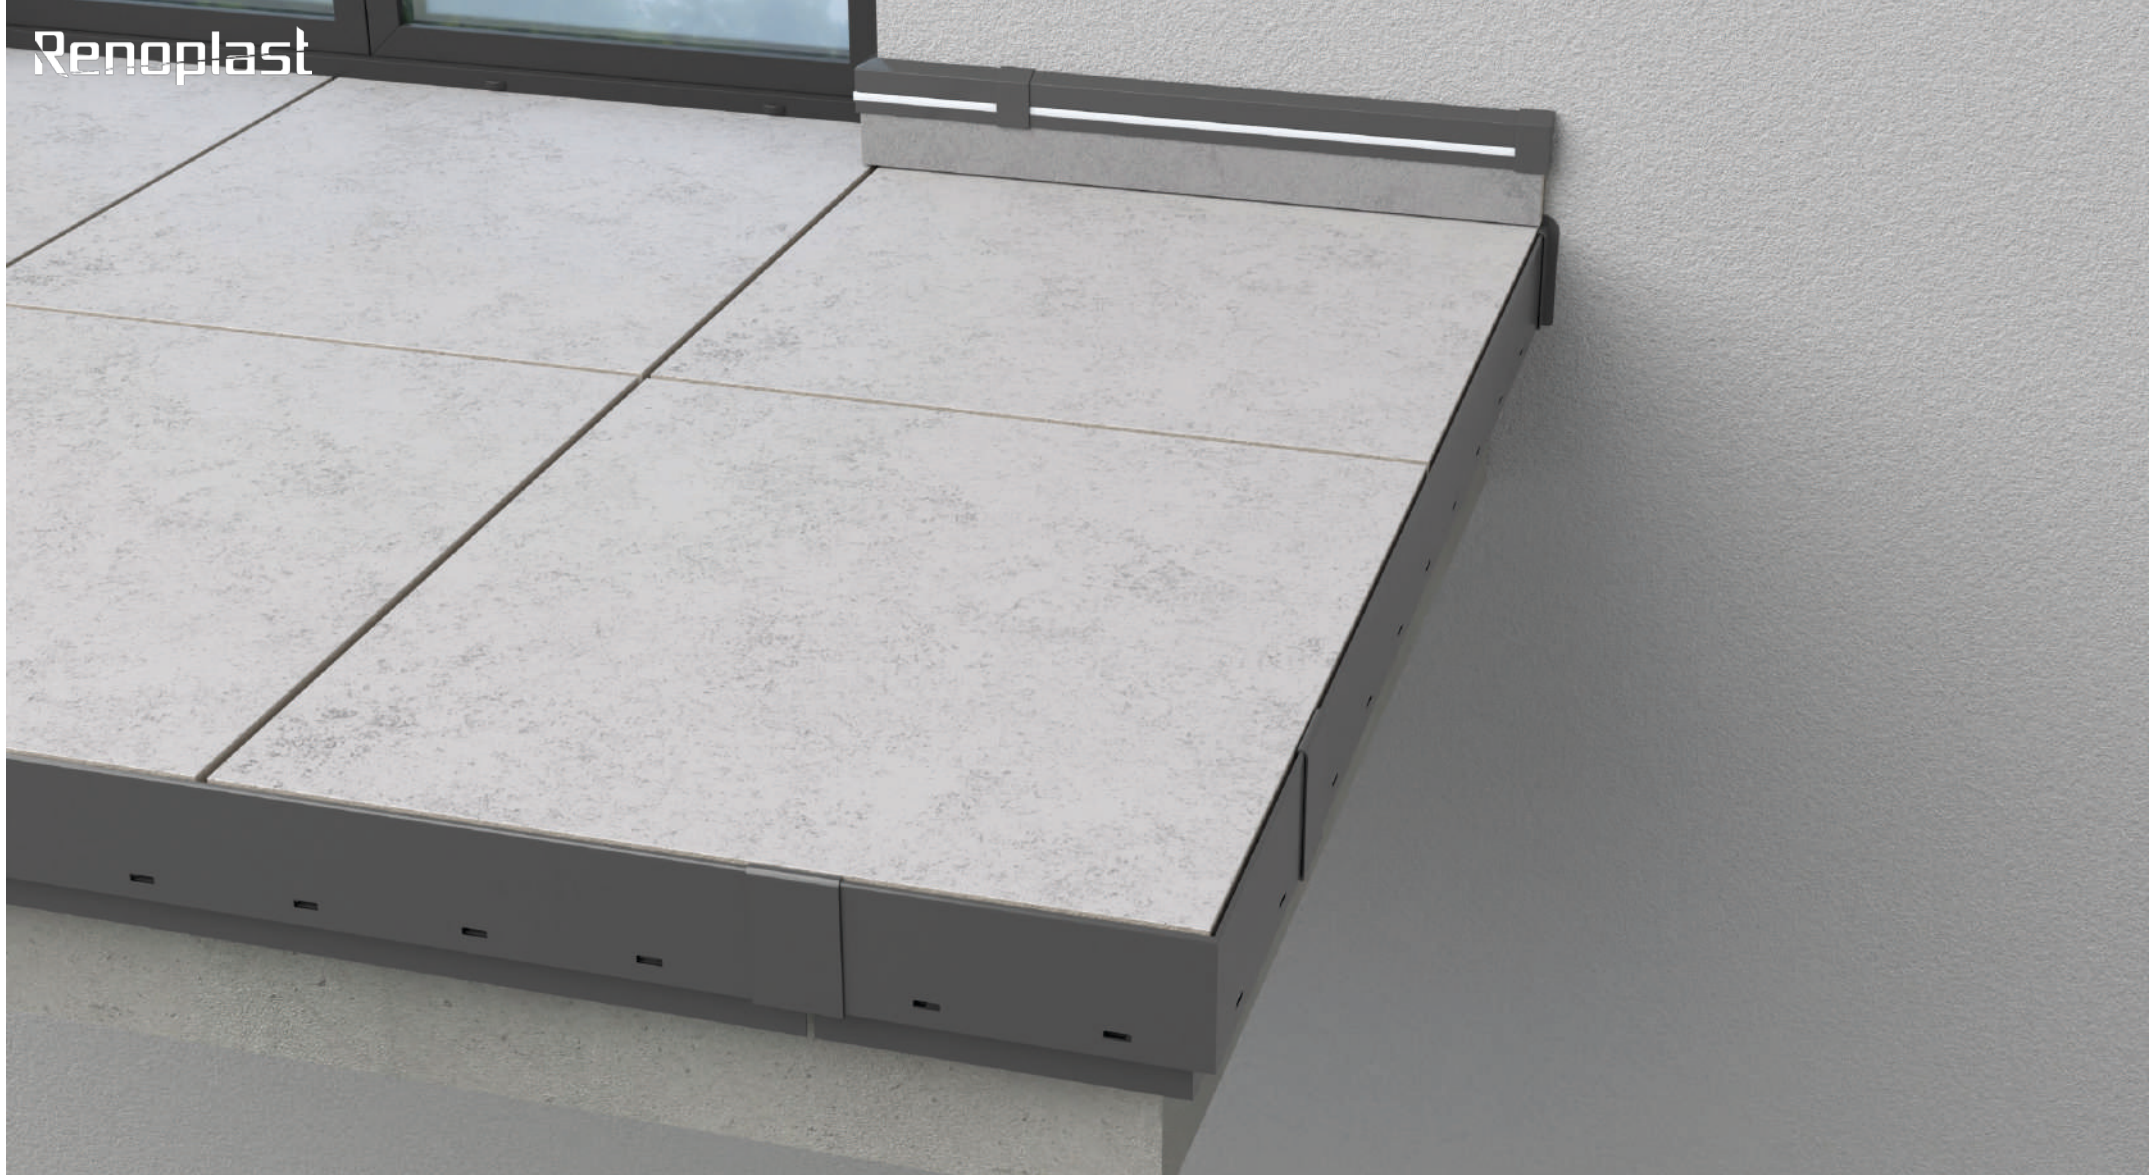


C1/C2 plinth installation

Start by mechanically fixing the **C1 plinth trim base rail** to the wall at the membrane upstand top edge level as the membrane termination bar. Along the top edge of **C1 plinth trim base rail** apply elastic polyurethane sealant and lay 2 cm thick skirting tiles. Next snap the **C2 plinth trim**, including corners and clips. Finish the skirting installation by inserting the plastic strip into the **C2** groove. LED strip may also be fitted in the **C1 plinth trim base rail** to illuminate the floor.



Installation of Renoplast RK65 aluminium gutter system

RK65 aluminium gutters are fixed directly to the fascia cover under **W60** drip edge. Both the straight segments and angles should be fixed with the supplied self-drilling fasteners. The straight segments and gutter angles are connected with **RK65** gutter unions.

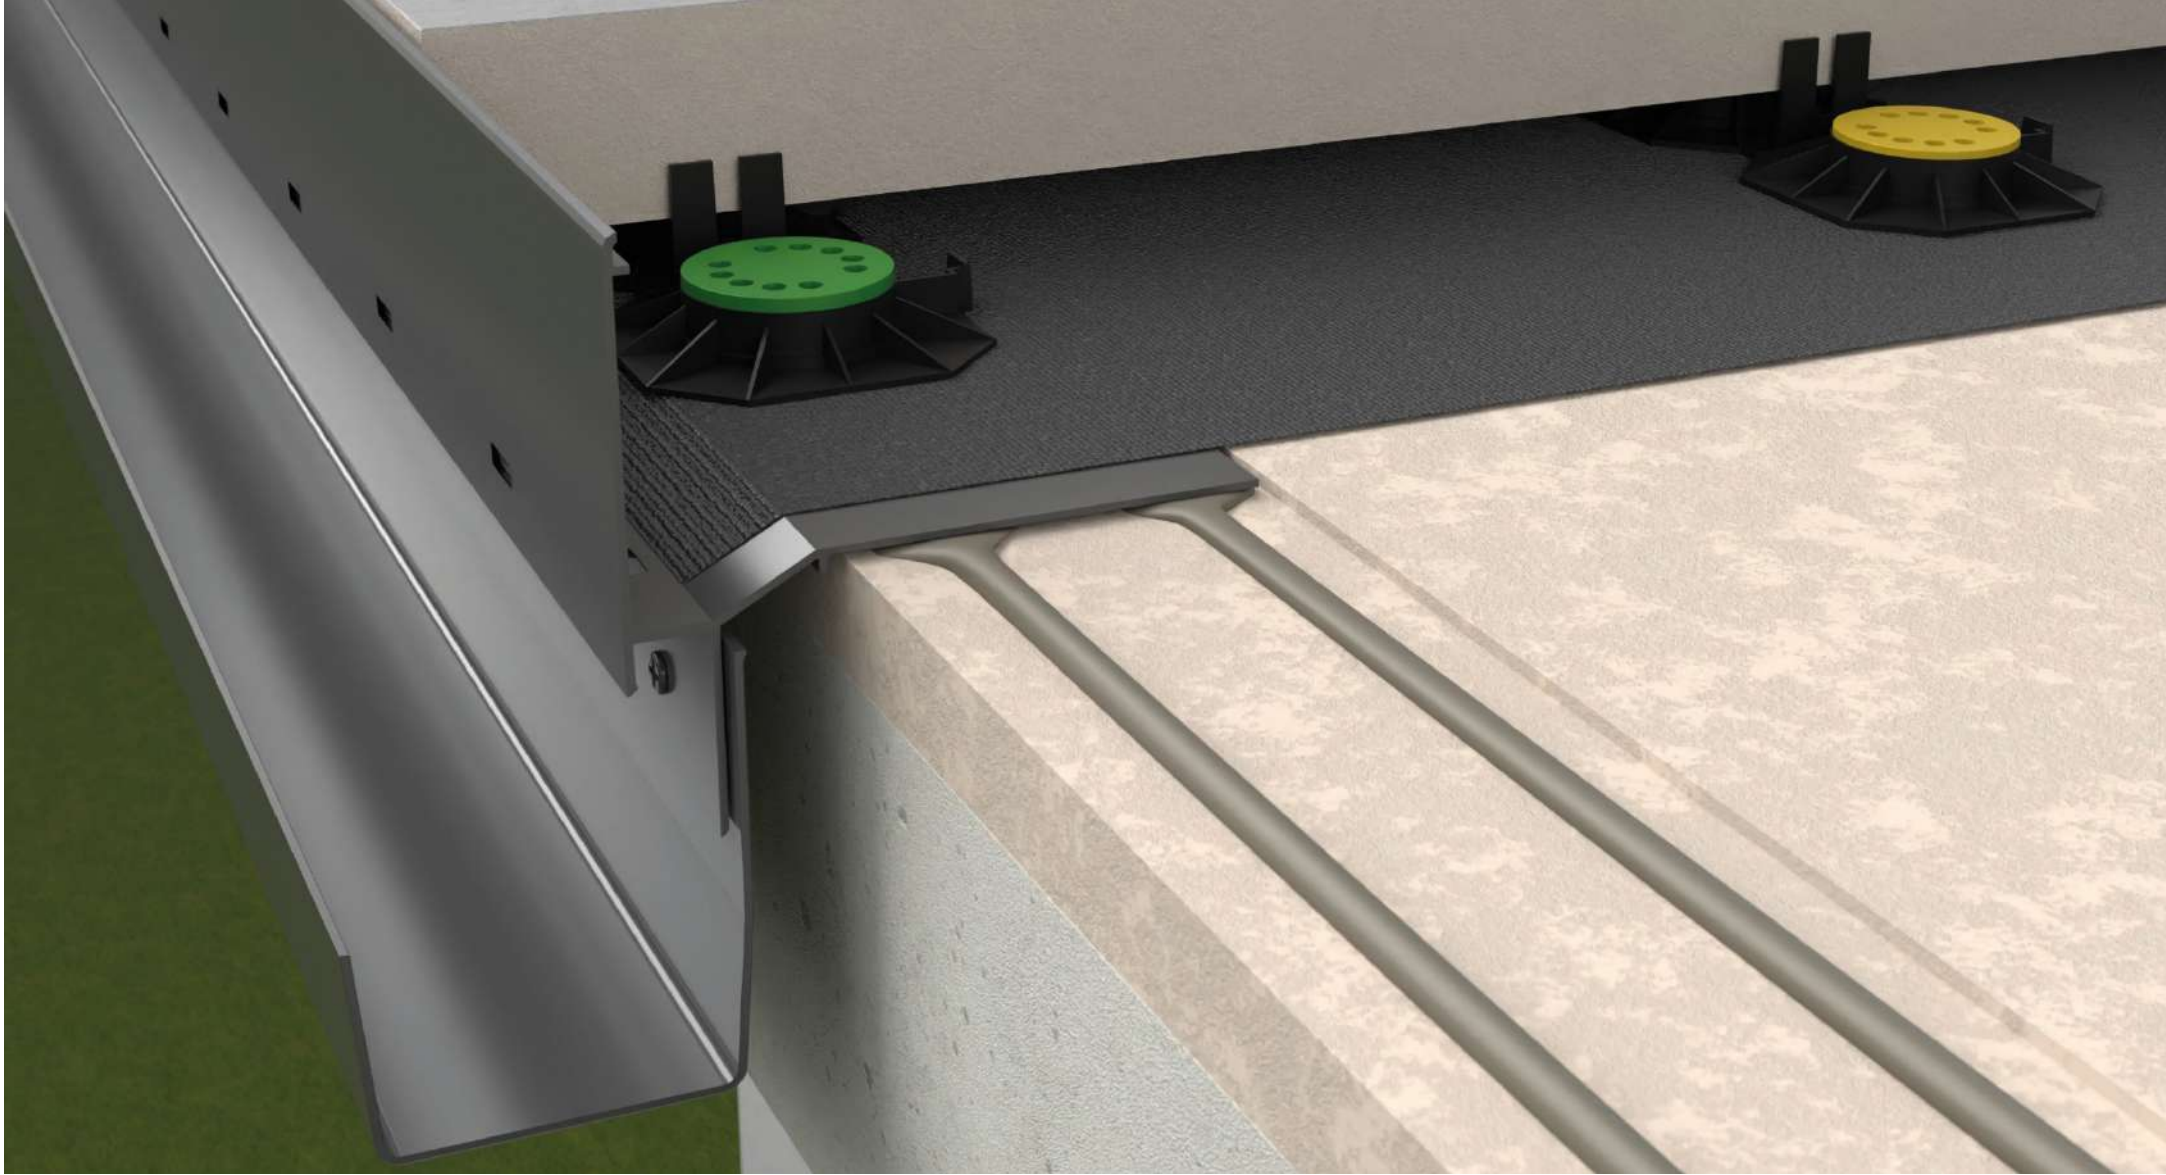


NOTES:

W60 drip edge has a 60 mm high upstand along the front edge, corresponding to standard thickness of porcelain made of 40-60 mm laid on **SMART** pedestals. In **W60 drip edges** the drain holes are positioned below the waterproofing layer to ensure efficient drainage of water balcony/terrace floors. The front upstand of **W60 drip edges** serves in addition as a perimeter restraint for the floor pavers.



QUALICOAT
Inspired by architecture, trusted by professionals
| SEASIDE |

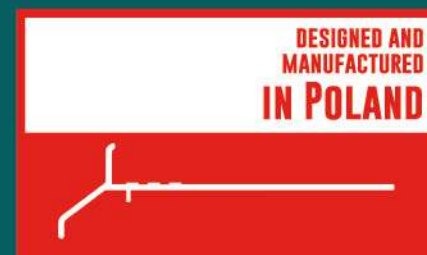

Renoplast

www.renoplast.pl/en