


Renoplast K100

DRIP EDGE

K100 drip edge is part of ECO K100 system designed for floors finished with porcelain pavers fixed with adhesive to sealing slurry waterproof barrier.

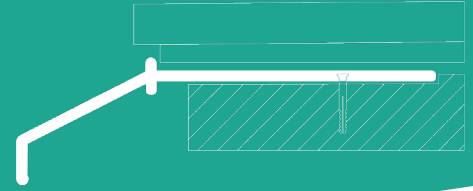

KEY FEATURES

- cost-effective profile, carefully shaped to ensure effective drainage of water from terraces, patios and balconies
- watertight barrier at eaves line
- long-term durability and full corrosion resistance


TECHNICAL DATA

BODY	made of AW 6060 aluminium alloy
WEIGHT	approx. 390 g/m (linear meter)
COATING	0.6 - 1.2 g/m ² conversion coating, and min. 60 µm polyester powder coating

INSTALLATION TOOLS

You will need the following tools: folding ruler, spirit level, knife, electric drill, hand-held mixer, steel plastering trowel, string line, pencil, spatula, metal handsaw or circular saw. Circular saw should be equipped with an aluminium cutting blade to cut without damaging the coating.

AUXILIARY COMPONENTS

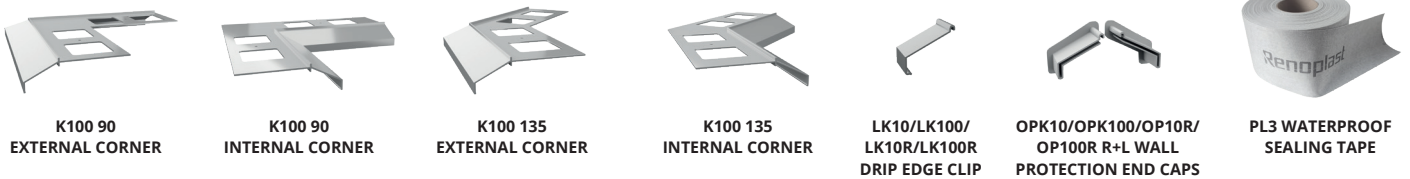

BASE

The base must be sound, level and clean. Screeds should be of min. C20 strength and should cure for 28 days. A recess, 3mm deep by 80 mm wide, should be formed around the floor perimeter to allow setting the drip edge flush with the screed top surface. This recess may be blocked out with blockout strip (supplied on request) in the case of new screed layers. In existing screeds the recess should be milled to the required depth and width (80 mm by 3 mm).

AMBIENT CONDITIONS DURING INSTALLATION

Ambient conditions should be as typically required for waterproofing and installation work.


COLOURS

Standard colours: RAL 7037 dusty grey, RAL 7024 graphite grey, RAL 8019 grey brown, RAL 9005 black. Other colours from RAL Classic chart are available on request.

Renoplast K100

DRIP EDGE

K100 drip edge is part of ECO K100 system designed for floors finished with porcelain pavers fixed with adhesive to sealing slurry waterproof barrier.

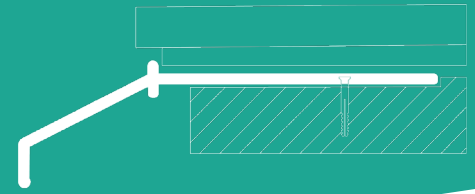

INSTALLATION

The drip edges should be set on sealing slurry or flexible sealant and secured in place with plastic plugs. Follow the installation guide available at: <https://www.renoplast.pl/download>.

SEE PRODUCT →



INSTALLATION GUIDELINES


Protect the paint coat from damage during installation. Reject any damaged components. Any dirt should be removed from the surfaces using water and non-abrasive cloth. Wet materials, such as sealing slurry or tile adhesive should be removed from the outer surfaces before drying. The manufacturer shall not be liable for any damage resulting from product misuse or using inadequate auxiliary materials or tools. All work must be in compliance with construction plans, product data sheet, relevant standards, good construction practice and safety requirements.

MAINTENANCE GUIDELINES


During use clean the trims at least twice a year. For cleaning use clean water and non-abrasive cloth. Do not use highly acidic or highly alkaline cleaners or surfactants which may react with aluminium. Do not use organic solvents containing esters, ketones, aromatic compounds, glycol esters, chlorinated hydrocarbons, etc. After cleaning rinse the surfaces with cold clean water. Do not use salt or other de-icing chemicals near the trims. We recommend to check the condition of the relevant terrace, patio and balcony components every six months. Immediately remove any discovered defects.

DIMENSIONS


CROSS-SECTION:

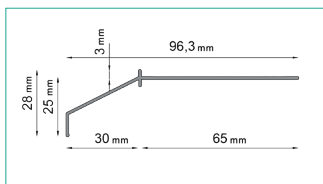


K100 DRIP EDGE

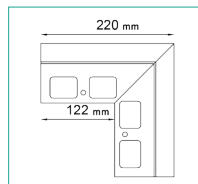


K100 90
EXTERNAL CORNER

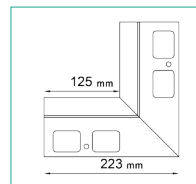


K100 90
INTERNAL CORNER

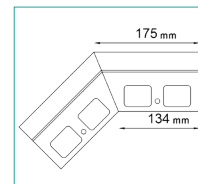


K100 135
EXTERNAL CORNER

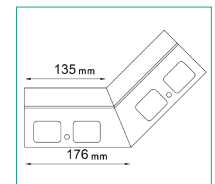

K100 135
INTERNAL CORNER

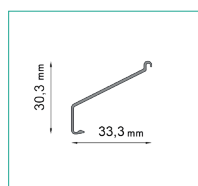

LK10/LK100/ LK10R/
LK100R DRIP EDGE CLIP

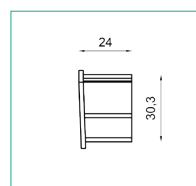


OPK10/OPK100/OP10R/
OP100R R+L WALL
PROTECTION END CAPS


Renoplast K100

DRIP EDGE


K100 drip edge is part of ECO K100 system designed for floors finished with porcelain pavers fixed with adhesive to sealing slurry waterproof barrier.

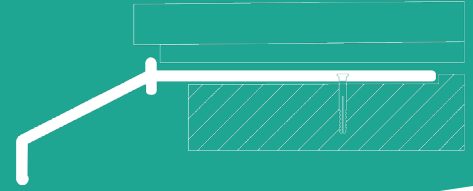

INSTALLATION EXAMPLE

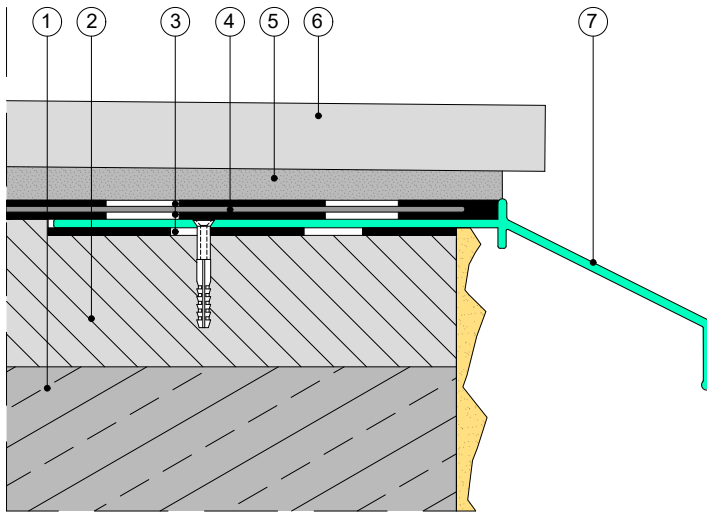

1. Structural slab
2. 1.5-2% sloping layer
3. Sealing slurry
4. PL3 waterproof sealing tape
5. Deformable tile adhesive
6. Porcelain pavers
7. K100 drip edge

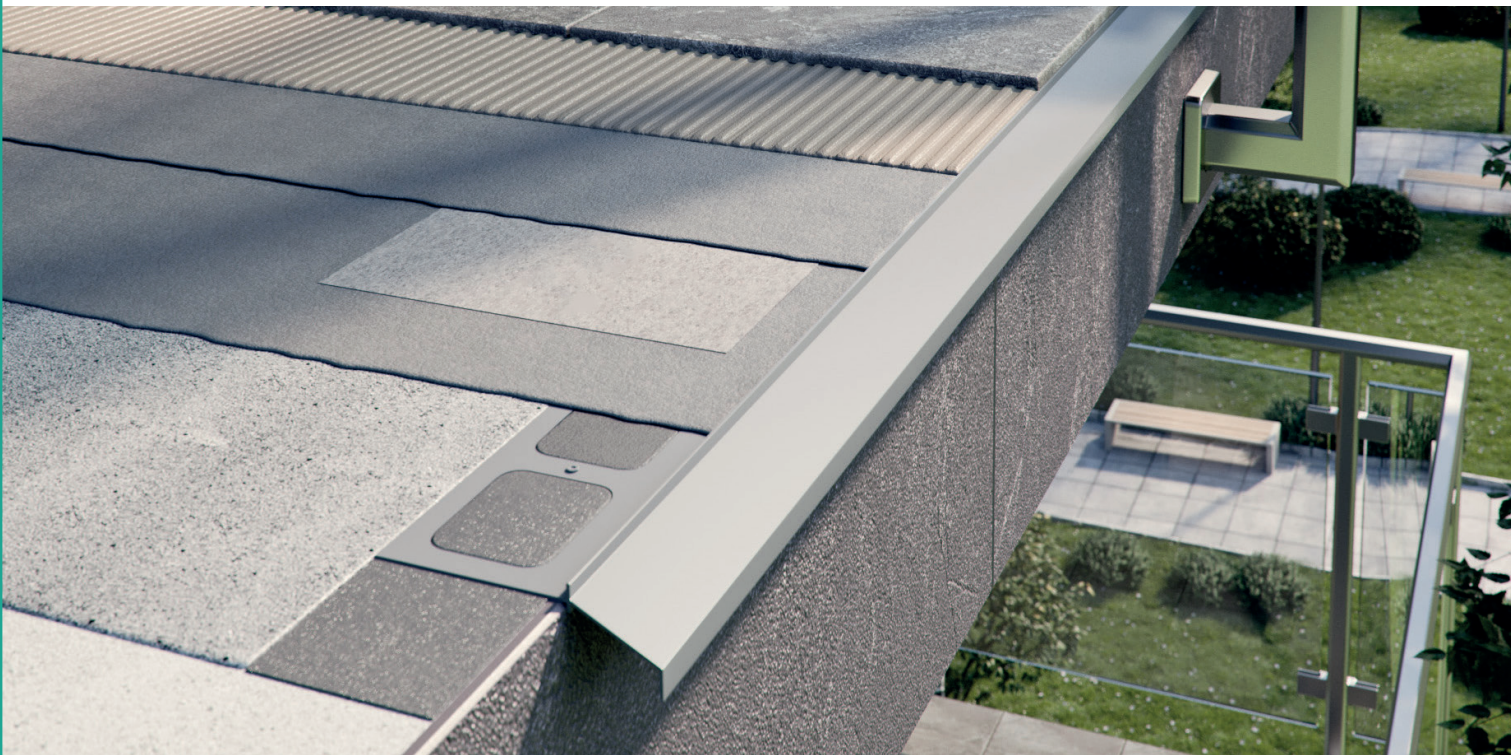

Notes:

Edition: 8.05.2026. This product brochure supersedes all previous editions. It gives recommendations for standard application conditions only, and thus shall not be used in place of installation drawings. Suitability of our products for particular conditions should be verified by the contractor. The actual product specifications may vary slightly due to allowable process or tool dimension changes. Any materials used in combination with Renoplast products must be obtained from reputable sources. Our liability for any omissions or inaccuracies of the data given in this brochure is limited to gross disinformation and/or negligence.

Renoplast

RENOPLAST Sp. z o.o.
phone: +48 697 635 580
office@renoplast.pl
www.renoplast.pl/en

