Renoplast

K40

DRIP EDGE

K40 drip edge is part of BASIC K40 system designed for floors finished with porcelain pavers fixed with adhesive to sealing slurry waterproof barrier. K40 drip edging allows installation of Gamrat, Bryza or Marley 75 mm round PVC gutters using MG75 or G75 gutter brackets.

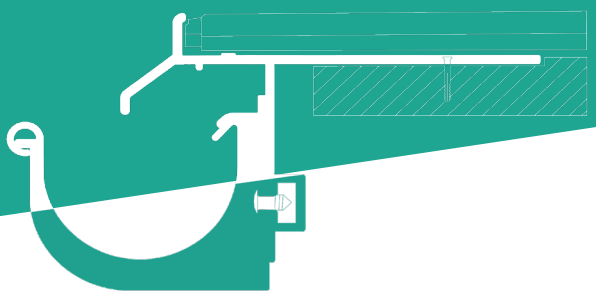

KEY FEATURES

- carefully shaped to ensure effective drainage of water from terraces, patios and balconies
- features flexible connection system to form a fully watertight drip edge/floor joint
- effective drainage of moisture from the underlying layers along the eaves line
- long-term durability and full corrosion resistance
- allows installation of Gamrat, Bryza or Marley 75 mm round PVC gutters using MG75 or G75 gutter brackets

TECHNICAL DATA

BODY	made of AW 6060 aluminium alloy
WEIGHT	approx. 1240 g/m (linear meter)
COATING	0.6 - 1.2 g/m² conversion coating, and min. 60 µm polyester powder coating

INSTALLATION TOOLS

You will need the following tools: folding ruler, spirit level, knife, electric drill, hand-held mixer, steel plastering trowel, string line, pencil, spatula, metal handsaw or circular saw. Circular saw should be equipped with an aluminium cutting blade to cut without damaging the coating.

AUXILIARY COMPONENTS



K40 90 EXTERNAL CORNER



K40 90 INTERNAL CORNER

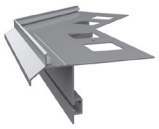

K40 135 EXTERNAL CORNER



K40 135 INTERNAL CORNER

LK30/LK40 DRIP EDGE CLIP

OPK30/OPK40 R+L WALL PROTECTION END CAPS

PL3 SEALING TAPE

MG75 GUTTER BRACKET

G75 GUTTER BRACKET



K30/K40 RETURN PIECE

BASE

The base must be sound, level and clean. Screeds should be of min. C20 strength and should cure for 28 days. A recess, 3mm deep by 80 mm wide, should be formed around the floor perimeter to allow setting the drip edge flush with the screed top surface. This recess may be blocked out with blockout strip (supplied on request) in the case of new screed layers. In existing screeds the recess should be milled to the required depth and width (80 mm by 3 mm).

AMBIENT CONDITIONS DURING INSTALLATION

Ambient conditions should be as typically required for waterproofing and installation work.

www.renoplast.pl/en
phone: +48 697 635 580
RENOPLAST Sp. z o.o., Ul. Fabryczna 14, 34-300 Żywiec, POLAND

Renoplast

K40

DRIP EDGE

K40 drip edge is part of BASIC K40 system designed for floors finished with porcelain pavers fixed with adhesive to sealing slurry waterproof barrier. K40 drip edging allows installation of Gamrat, Bryza or Marley 75 mm round PVC gutters using MG75 or G75 gutter brackets.

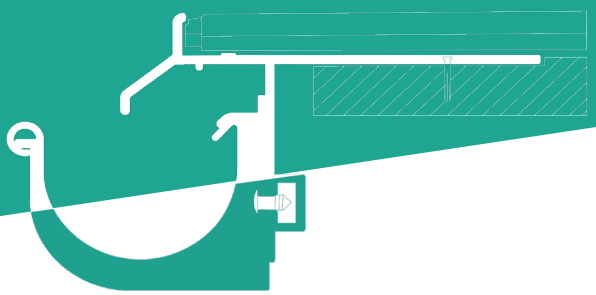

INSTALLATION

The drip edges should be set on sealing slurry or flexible sealant and secured in place with plastic plugs.
Follow the installation guide available at: https://www.renoplast.pl/download.
Renoplast gutter brackets fit Gamrat, Bryza i Marley gutters.
Follow the installation guide available at:
https://www.youtube.com/watch?v=ZiJhTLfQAJk&t=1s

SEE PRODUCT
K40
GUTTER BRACKETS

INSTALLATION GUIDELINES

Protect the paint coat from damage during installation. Reject any damaged components. Any dirt should be removed from the surfaces using water and non-abrasive cloth. Wet materials, such as sealing slurry or tile adhesive should be removed from the outer surfaces before drying. The manufacturer shall not be liable for any damage resulting from product misuse or using inadequate auxiliary materials or tools. All work must be in compliance with construction plans, product data sheet, relevant standards, good construction practice and safety requirements.

MAINTENANCE GUIDELINES

For cleaning use clean water and non-abrasive cloth. Do not use highly acidic or highly alkaline cleaners or surfactants which may react with aluminium. Do not use organic solvents containing esters, ketones, aromatic compounds, glycol esters, chlorinated hydrocarbons, etc. After cleaning rinse the surfaces with cold clean water. Do not use salt or other de-icing chemicals near the trims. We recommend to check the condition of the relevant terrace, patio and balcony components every six months. Immediately remove any discovered defects.

DIMENSIONS

CROSS-SECTION:

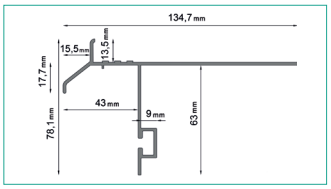

K40 DRIP EDGE

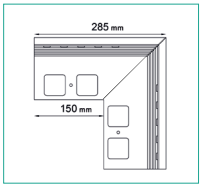

K40 90 EXTERNAL CORNER

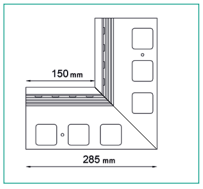

K40 90 INTERNAL CORNER

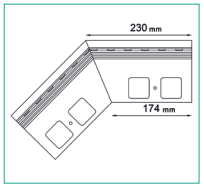

K40 135 EXTERNAL CORNER

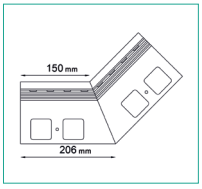

K40 135 INTERNAL CORNER

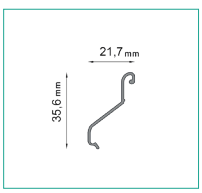

LK30/LK40 DRIP EDGE CLIP

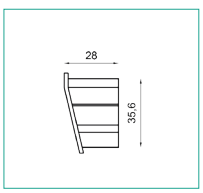

OPK30/OPK40 R+L WALL PROTECTION END CAPS

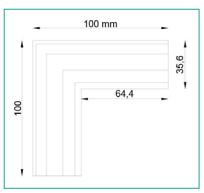

K30/K40 RETURN PIECE

RENOPLAST Sp. z o.o., Ul. Fabryczna 14, 34-300 Żywiec, POLAND
phone: +48 697 635 580
www.renoplast.pl/en

Renoplast

K40

DRIP EDGE

K40 drip edge is part of BASIC K40 system designed for floors finished with porcelain pavers fixed with adhesive to sealing slurry waterproof barrier. K40 drip edging allows installation of Gamrat, Bryza or Marley 75 mm round PVC gutters using MG75 or G75 gutter brackets.

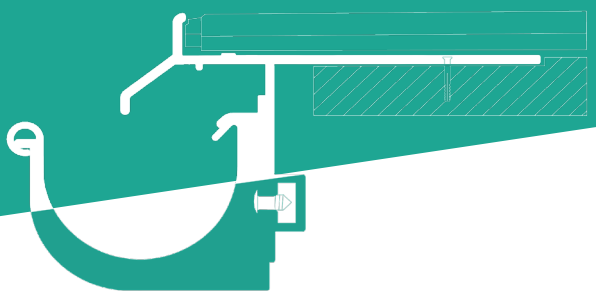

INSTALLATION EXAMPLE

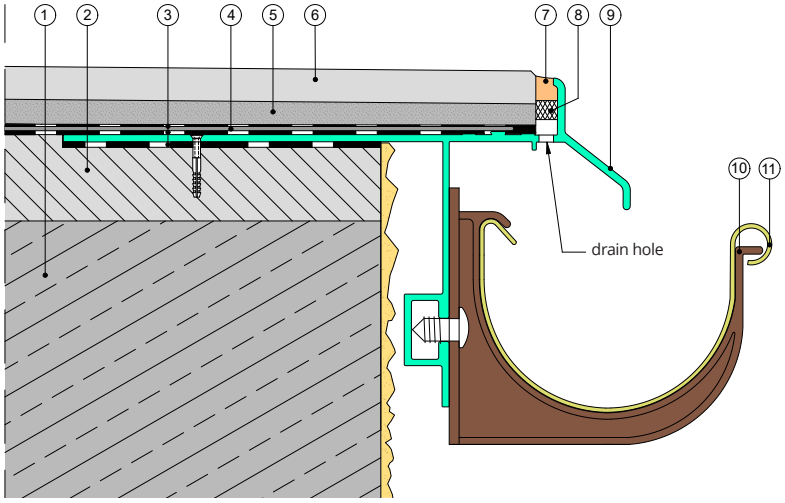

1. Structural slab
2. 1.5-2% sloping layer
3. Sealing slurry
4. **PL3 sealing tape**
5. Deformable tile adhesive
6. Porcelain paver
7. Polyurethane or other suitable sealant
8. Backer rod
9. **K40 drip edge**
10. **MG75/G75 gutter bracket**
11. **75 mm PVC gutter**

Renoplast MG75 gutter brackets fit Gamrat and Marley 75 mm PVC gutters. Renoplast MG75 gutter brackets fit Gamrat and Bryza 75 mm PVC gutters.

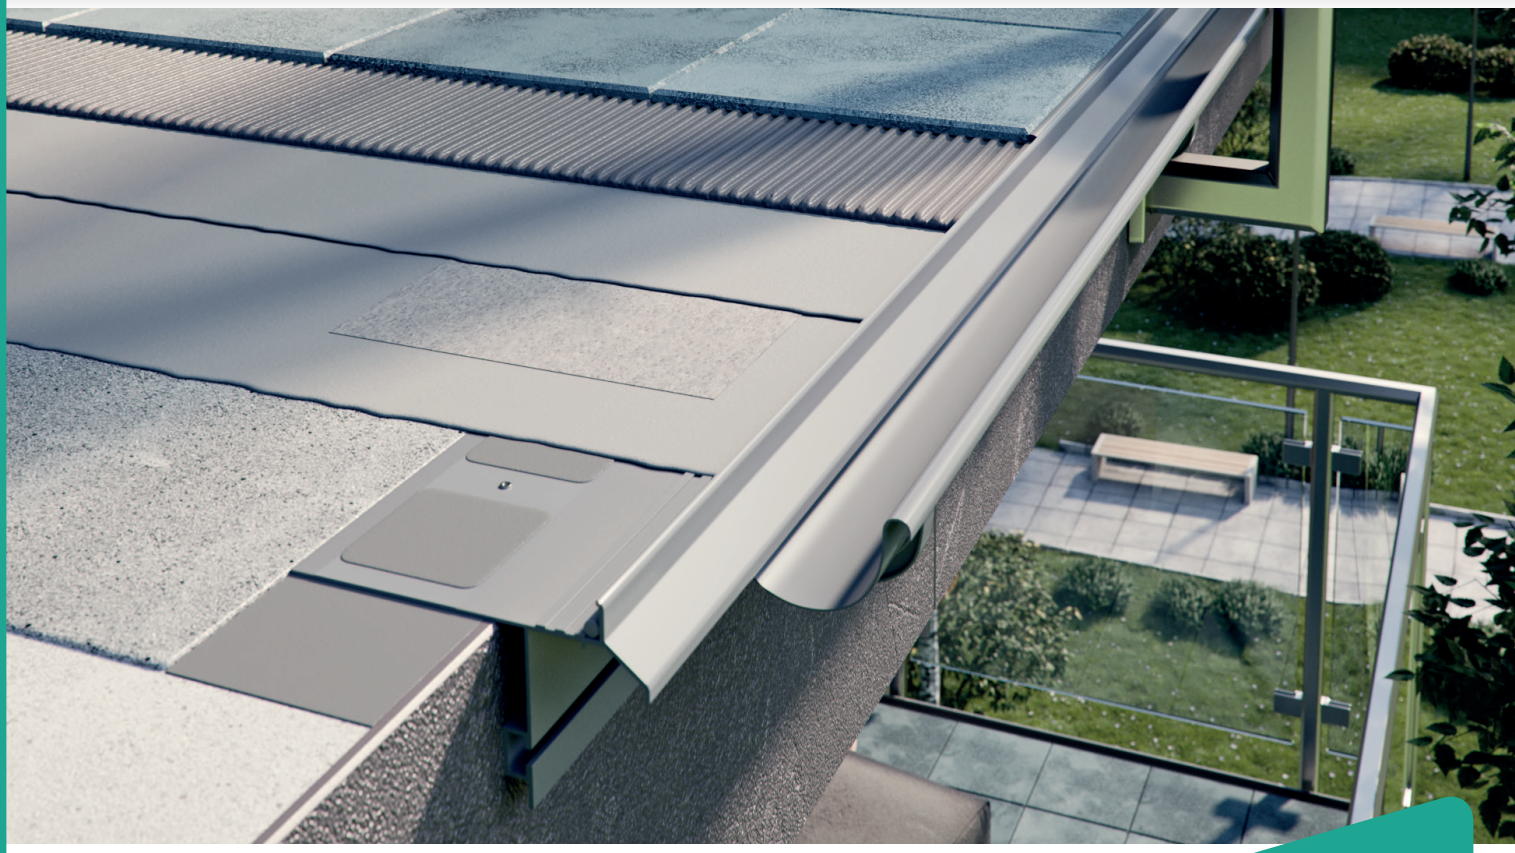

RENOPLAST Sp. z o.o., Ul. Fabryczna 14, 34-300 Żywiec, POLAND
phone: +48 697 635 580
www.renoplast.pl/en

Notes:
Edition: 8.10.2026. This product brochure supersedes all previous editions. It gives recommendations for standard application conditions only, and thus shall not be used in place of installation drawings. Suitability of our products for particular conditions should be verified by the contractor. The actual product specifications may vary slightly due to allowable process or tool dimension changes. Any materials used in combination with Renoplast products must be obtained from reputable sources. Our liability for any omissions or inaccuracies of the data given in this brochure is limited to gross disinformation and/or negligence.

Renoplast
RENOPLAST Sp. z o.o.
phone: +48 697 635 580
office@renoplast.pl
www.renoplast.pl/en