Renoplast

# W30R PLUS

## DRIP EDGE

**W30R PLUS drip edge is part of BASIC W30R PLUS edging system used with pedestal flooring consisting of 2 cm porcelain pavers supported on SMART fixed-height pedestals placed on EPDM membrane waterproof barrier. W30R PLUS drip edges are designed to allow attachment of Renoplast R50 or RK65 gutter systems.**

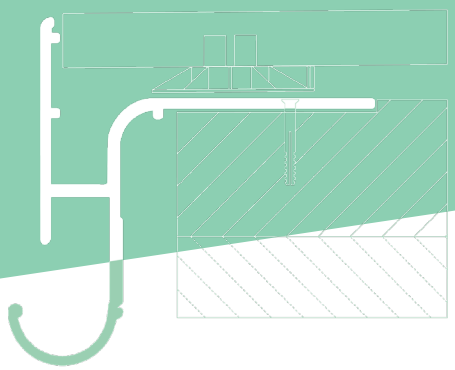

## KEY FEATURES

- effective drainage of moisture from the waterproof barrier through large drain and overflow holes
- firm restraint for the paving
- long-term durability and full corrosion resistance
- compatible with Renoplast R50 or RK65 aluminium gutter systems

## TECHNICAL DATA

| | |
|---|---|
| **BODY** | AW 6060 aluminium alloy |
| **WEIGHT** | approx. 1320 g/m (linear meter) |
| **COATING SYSTEM** | 0.6 - 1.2 g/m² conversion coating, and min. 60 µm polyester powder coating |

## INSTALLATION TOOLS

You will need the following tools: folding ruler, spirit level, knife, electric drill, hand-held mixer, steel plastering trowel, string line, pencil, spatula, metal handsaw or circular saw. Circular saw should be equipped with an aluminium cutting blade to cut without damaging the coating.

## AUXILIARY COMPONENTS

**W30R PLUS 90 EXTERNAL CORNER**

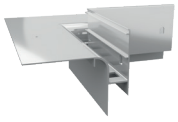

**W30R PLUS 90 INTERNAL CORNER**

**W30R PLUS 135 EXTERNAL CORNER**

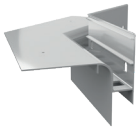

**W30R PLUS 135 INTERNAL CORNER**

**LW30/LW30R PLUS/ LW60/LW63 DRIP EDGE CLIP**

**OPW30/OPW30R PLUS/OPW60/OPW63 R+L WALL PROTECTION END CAPS**

**SMART PEDESTAL**



**R50 ROUND GUTTER**



**RK65 BOX GUTTER**

**W30R PLUS R+L (RIGHT AND LEFT) RETURN PIECES**

**ABS BLOCKOUT STRIP**

## BASE

The base must be sound, level and clean. Screeds should be of min. C20 strength and should cure for 28 days. A recess, 3mm deep by 80 mm wide, should be formed around the floor perimeter to allow setting the drip edge flush with the screed top surface. This recess may be blocked out with blockout strip (supplied on request) in the case of new screed layers. In existing screeds the recess should be milled to the required depth and width (80 mm by 3 mm).

## AMBIENT CONDITIONS DURING INSTALLATION

Ambient conditions should be as typically required for waterproofing and installation work.

www.renoplast.pl/en
phone: +48 697 635 580
RENOPLAST Sp. z o.o., Ul. Fabryczna 14, 34-300 Żywiec, POLAND

Renoplast

# W30R PLUS

## DRIP EDGE

**W30R PLUS drip edge is part of BASIC W30R PLUS edging system used with pedestal flooring consisting of 2 cm porcelain pavers supported on SMART fixed-height pedestals placed on EPDM membrane waterproof barrier. W30R PLUS drip edges are designed to allow attachment of Renoplast R50 or RK65 gutter systems.**

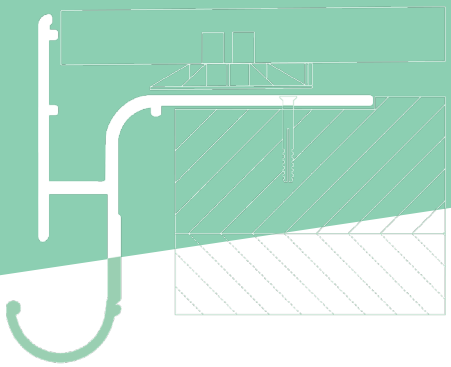

www.renoplast.pl/en
phone: +48 697 635 580
RENOPLAST Sp. z o.o., Ul. Fabryczna 14, 34-300 Żywiec, POLAND

## INSTALLATION

The drip edges should be set on sealing slurry or flexible sealant and secured in place with plastic plugs. Follow the installation guide available at: https://www.renoplast.pl/download.

SEE PRODUCT →

## INSTALLATION GUIDELINES

Protect the paint coat from damage during installation. Reject any damaged components. Any dirt should be removed from the surfaces using water and non-abrasive cloth. Wet materials, such as sealing slurry or tile adhesive should be removed from the outer surfaces before drying. The manufacturer shall not be liable for any damage resulting from product misuse or using inadequate auxiliary materials or tools. All work must be in compliance with construction plans, product data sheet, relevant standards, good construction practice and safety requirements.

## MAINTENANCE GUIDELINES

For cleaning use clean water with some detergent. Do not use highly acidic or high alkaline cleaners or surfactants, which may react with aluminium. Do not use organic solvents containing esters, ketones, aromatic compounds, glycol esters, chlorinated hydrocarbons, etc. After cleaning rinse the surfaces with cold clean water. In winter do not use salt or other de-icing chemicals. We recommend to check the condition of the relevant terrace, patio and balcony components every six months. Immediately remove any discovered defects.

## DIMENSIONS

### CROSS-SECTION:

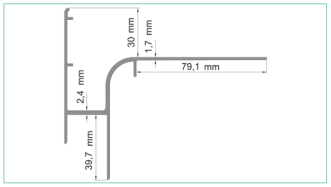


**W30R PLUS DRIP EDGE**

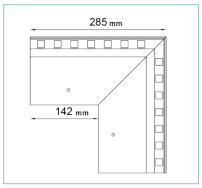


**W30R PLUS 90 EXTERNAL CORNER**

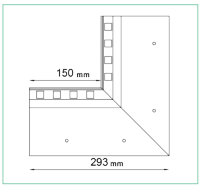


**W30R PLUS 90 INTERNAL CORNER**

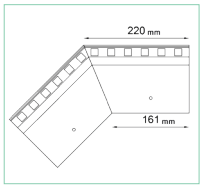


**W30R PLUS 135 EXTERNAL CORNER**

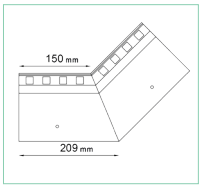


**W30R PLUS 135 INTERNAL CORNER**

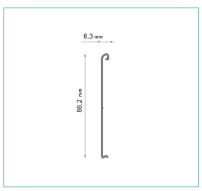


**LW30/LW30R PLUS/ LW60/LW63 DRIP EDGE CLIP**

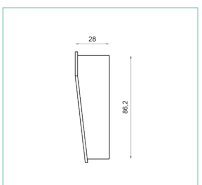


**OPW30/OPW30R PLUS/ OPW60/OPW63 R+L WALL PROTECTION END CAPS**

Renoplast

# W30R PLUS

## DRIP EDGE

**W30R PLUS drip edge is part of BASIC W30R PLUS edging system used with pedestal flooring consisting of 2 cm porcelain pavers supported on SMART fixed-height pedestals placed on EPDM membrane waterproof barrier. W30R PLUS drip edges are designed to allow attachment of Renoplast R50 or RK65 gutter systems.**

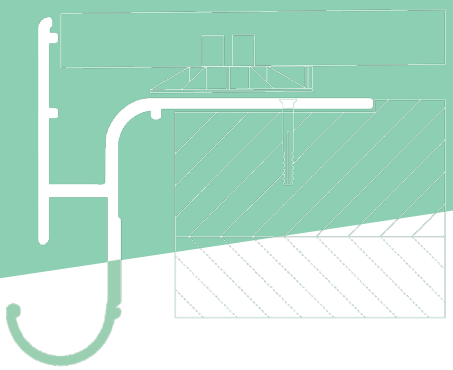

## INSTALLATION EXAMPLE

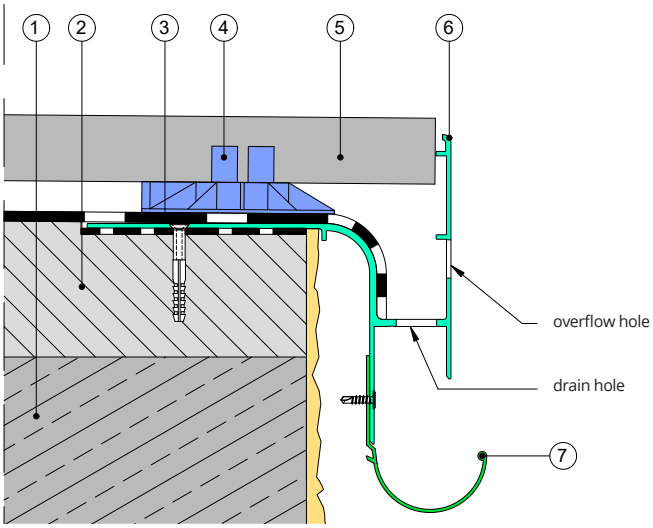


1. Structural slab
2. 1.5-2% sloping layer
3. **EPDM**, PVC or other appropriate waterproof sheet membrane
4. Paver
5. **SMART pedestal**
6. **W30R PLUS drip edge**
7. **R50 round gutter**

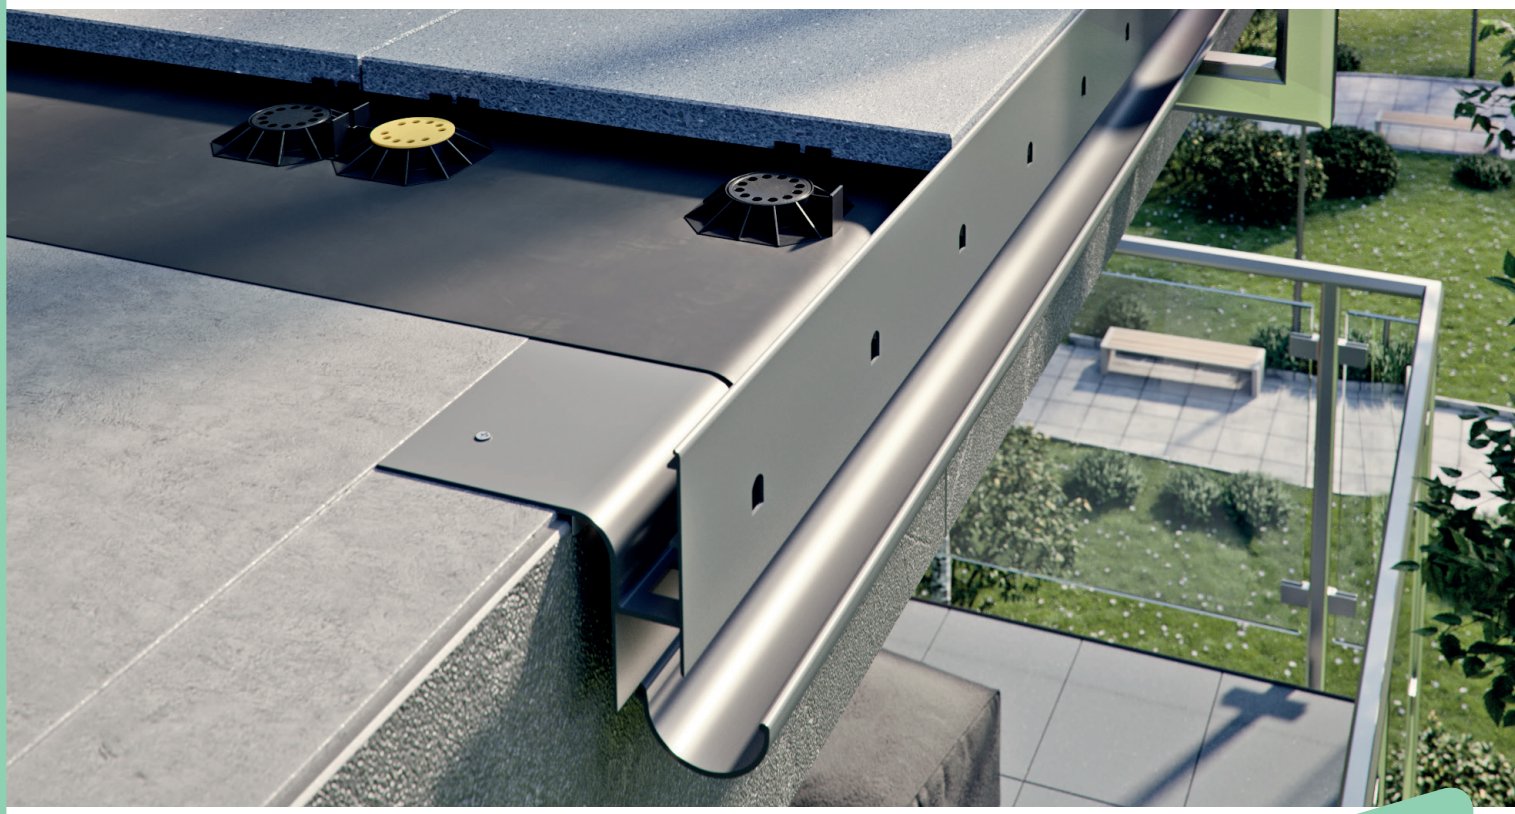


RENOPLAST Sp. z o.o., Ul. Fabryczna 14, 34-300 Żywiec, POLAND
phone: +48 697 635 580
www.renoplast.pl/en



**Notes:**
Edition: 8.10.2026. This product brochure supersedes all previous editions. It gives recommendations for standard application conditions only, and thus shall not be used in place of installation drawings. Suitability of our products for particular conditions should be verified by the contractor. The actual product specifications may vary slightly due to allowable process or tool dimension changes. Any materials used in combination with Renoplast products must be obtained from reputable sources. Our liability for any omissions or inaccuracies of the data given in this brochure is limited to gross disinformation and/or negligence.



Renoplast

**RENOPLAST Sp. z o.o.**
phone: +48 697 635 580
office@renoplast.pl
www.renoplast.pl/en